

PRODUCT CATALOGUE



INTRODUCTION / DOCUMENTATION	2
MEASUREMENT PROGRAMS	7
SHAFT ALIGNMENT SYSTEMS	12
WIND SYSTEMS	18
SHEAVE/PULLEY ALIGNMENT SYSTEMS	22
DIGITAL PRECISION LEVEL	24
VIBRATION MEASUREMENT TOOL	25
GEOMETRIC MEASUREMENT SYSTEMS	26
DISPLAY UNITS	30
LASER TRANSMITTERS	31
DETECTORS AND OTHER RECEIVERS	32
PARTS	35
APPAREL / GIVE AWAYS	56
TECHNICAL SPECIFICATIONS AND DRAWINGS	58
SPECIFICATIONS FOR BATTERIES AND CHARGERS	59
PART NUMBER PAGE LIST	80

FIND YOUR SYSTEM

SYSTEM	PAGE
XT770 Shaft + GEO	12
XT770 Shaft + Bore	13
XT770 Shaft	14
XT660 Shaft	15
XT550 Shaft EX	16
XT440 Shaft	17
XT660 Shaft SG1 Wind	18
XT660 Shaft WMB Wind	19
Shaft alignment Vestas	20
Shaft alignment Gamesa	21
XT190 BTA	22
D92 BTA	23
XT290 Digital Level	24
XT280 VIB	25
XT980 Sawmill	26
XT950 Bore alignment	27



IMPORTANT INFORMATION

Please read the information on page 58 about specific technical limitations and product compatibilities, as well as explanation of specifications in this catalogue.

We reserve the right to make modifications of the product design and technical specifications without prior notification.



E-SERIES IS DISCONTINUED


In this catalogue revision 25 all E-series systems are removed because they are discontinued.

Please check with your local distributor for replacement solutions.

What the pictures show

System picture. Does only show the main parts of the system, not all items that are included. Always read the Part list for complete system specification.





Easy-Laser® XT770 Shaft+GEO
Part No: 12-1128 (System with XT20 Laser transmitter)
Part No: 12-1334 (System with XT22 Laser transmitter)

For installation and maintenance of all types of rotating machine The XT770 Shaft - 6EO system has all the programs and functions need to keep your machines up and running. Configured for install ton and overhaul of rotating machinery, like e.g. gas compressors. Programs for alignment of horizontal, vertical/flange mounted machines, machine trains and cardan/offset mounted machines, anchine trains and cardan/offset mounted machines and to the control of the control o

XT70 measuring units
The XT70 units allow for multipoint, continuous sweep and uncoup

- sweep measurements. They also support the 360°LIVE move featu

 Large 20x20 mm [0.79x.0.79"] 2 axis TruePSD detectors.

 Dot-type laser technology for accuracy and versatility.

|D| |E| |XT|: Indicates which product range the part is compatible with. If no letter is present, the part fits all three ranges.

Note: If there are other compatibility limitations these are mentioned for each product.



Rotating detector bra Part No: 12-1209 Description: Allows for 360° sv

Main product picture *

Additional pictures *

NOTE! * Be aware that these pictures may show items that are not included for the specific part number.

DOCUMENTATIONEasy-Laser® Product overview

Learn more about a specific measurement system or application

In our measurement system brochures you can find more extensive technical specifications and more information on the systems and products in this Product overview. Available for download in many different languages from: www.easylaser.com



Easy-Laser® XT770



Easy-Laser® XT660




Easy-Laser® XT550 EX



Easy-Laser® XT440



Easy-Laser® XT980

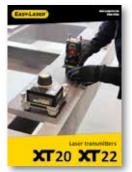

Easy-Laser® XT20/XT22



Easy-Laser® XT290



Easy-Laser® XT280




Easy-Laser® XT190



Easy-Laser® XT Bore



Easy-Laser® D92

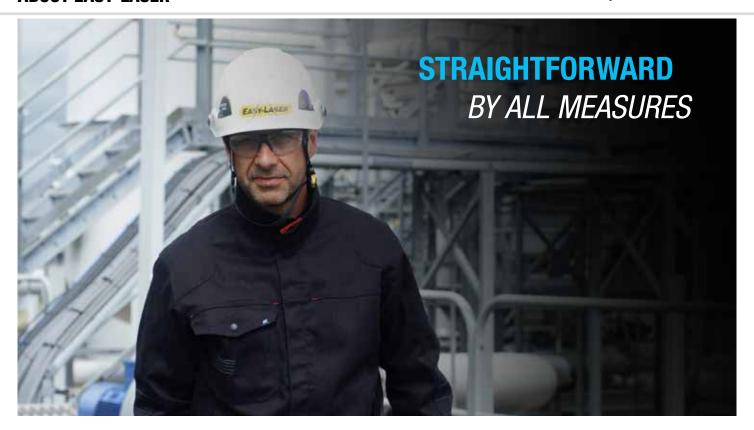

A reliable business partner

Easy-Laser® is one of the world's leading manufacturers and suppliers of laser measurement systems for all types of industry. We provide extreme accuracy and precision. But that's not what sets us apart. Today, when virtually anyone with a decent laser can do "straight", to get ahead, you need to be a bit more forward-thinking.

Because, in the long run, what really counts is neither the absolute straightness of an individual component nor the precise alignment of shafts. It's what these measures add up to: Increased productivity and the saving of resources. Those are the things we ultimately deliver. And from that perspective our most important task is to help you make the road leading there as free from bumps and bends as possible.

That means developing user-friendly measurement and alignment systems that are as easy to get your head around, as they are versatile and scalable. It also means shortening delivery times, extending warranties and optimizing training and support.

Moreover, you can always expect us, or any of our partners, to give you an honest opinion on which of our products are crucial to your operations and which you can do without. What really needs to be aligned and what not. So that what we offer you is a solution perfectly aligned with your needs — and your budget.

Regardless of whether you're a service technician, a purchaser or the CFO of a multinational industrial group, you'll find Easy-Laser® truly easy to deal with. Or as we like to put it – straightforward by all measures.

Worldwide distribution network

Easy-Laser® has representatives in over 70 countries. You find your local Easy-Laser retailer at our web page www.easylaser.com > contact

Long warranty

The systems come with a 3 year limited warranty. Learn more at easylaser.com/en-us/support/warranty. The quality system of the company is ISO9001 approved.







Our service concept

Our service department usually takes care of servicing or calibration within seven working days. All this makes Easy-Laser® a safer working partner for your operation. As an extra service, we provide a 48 hour express service for shaft alignment systems when accidents occur and time is of the essence. Contact us for further information about terms and conditions.





Easy-Laser® is manufactured by Easy-Laser AB, Alfagatan 6, 431 49 Mölndal, Sweden. +46 31 708 63 00, info@easylaser.com, www.easylaser.com



SUSTAINABILITY

- A RESPONSIBILITY FOR ALL OF US

Easy-Laser works actively with sustainability issues and supports the UN Global Compact's core principles* on the environment, anti-corruption, human rights and labour conditions. This permeates our entire business, every day.

















Our working environment

It is important for us to be an inclusive and open workplace, where people enjoy working and want to stay for a long time. The relationship between us as an employer and our employees should be characterised by openness, respect and empowerment.

We embrace diversity.

We offer flexibility in terms of working hours and choice of workplace.

We work systematically with work environment issues.

We prevent health problems through annual health checks and wellness activities.

We measure satisfaction through a regular staff survey.

Our products

By using Easy-Laser products, our customers can run a more sustainable business; a properly set-up machine will not break down prematurely and will not use more energy than necessary. But what about the environmental impact of our own products?

We strive to use sustainable materials in our products and for them to have a long service life.

We offer repair, calibration and maintenance of our products as close to the customer as possible.

Our operations

We strive to continually reduce the environmental impact of our own operations, large and small.

We recycle as much as possible, both from our production and our other activities.

We use carbon footprint compensated transports.

We use only fossil-free electricity.

Our social responsibility

We take responsibility in our local community but also globally through our cooperation with suppliers and distributors.


Both distributors and suppliers must meet the requirements set out in our Code of Conduct.

We will be good neighbours and seize opportunities to strengthen the communities in which we operate.

Short-term profitability shall not take precedence over long-term sustainability.



^{*} https://www.unglobalcompact.org/what-is-gc/mission/principles

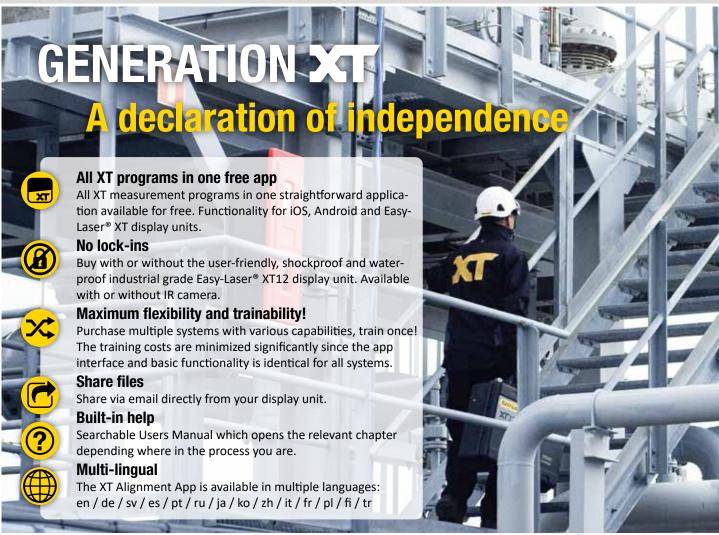











	XT290 -			_								
Please	note that what you can measure is in reality depending on the XT280 -		_									
	rement equipment included in your system, not the XT Alignment App. XT190 -	_										
	p always includes all programs and functions, and is free to download.											
			<u>+</u>	<u>+</u>	<u>*</u>	<u>*</u>	<u> </u>		<u> </u>		<u> </u>	<u> </u>
	HORIZONTAL 9-12-3				•							
<u> </u>	Shaft alignment measurement mode.											
4H_4H	MACHINE TRAIN (UNLIMITED)											
-11-711	Shaft alignment program.											
	MACHINE TRAIN (3 MACHINES/2 COUPLINGS)											
41311	Shaft alignment program.											
	SOFT FOOT											
Q	Shaft alignment program/feature.											
, ,	EASYTURN™											
	Shaft alignment measurement mode.											
2000AO	MULTIPOINT											
	Shaft alignment measurement mode.											
111111				\vdash								
THE STATE OF THE S	CONTINUOUS SWEEP											
The state of the s	Shaft alignment measurement mode.											
THE TOTAL PROPERTY OF THE PARTY	UNCOUPLED SWEEP											
The same of the sa	Shaft alignment measurement mode.											
	WIDE LIVE Shaft alignment function.											
T.	Allows for live adjustment at larger angles, vertically and horizontally separately.											
	360 LIVE Shaft alignment function.											
	Allows for live adjustment at any position, in both directions simultaneously.)			
A	ADJUSTMENT GUIDE Shaft alignment function. Simulate effects of shimming											
A.	to decide optimum adjustment. For programs Horizontal and Machine train.											
	VERTICAL/FLANGE MOUNTED											
\\\	Shaft alignment program.											
	CARDAN/OFFSET MOUNTED											
	Shaft alignment program. (NOTE: Requires the Cardan bracket kit.)											
	VALUES (Digital Dial Indicator)											
V 0.00 H 0.00	Versatile program for almost any kind of alignment jobs.											
	LEVEL				_							
	Part of Values program. (NOTE: The level function requires XT290 Level.)				\circ	0		0	\circ		$ \circ $	0
							<u> </u>					
	TWIST Check base twist and flatness with the M and S measuring units.					0						
	(NOTE: Requires magnet bases.)											
	BASIC FLATNESS Measure two rows of points, 2 to 8 at each.							0		0		
	To be used with separate laser transmitter like the XT20 and XT22.											
	STRAIGHTNESS For use with separate laser transmitter (e.g. XT20/XT22/XT24).							0				
	BORE CENTER Straightness measurement of bore center lines, bearing journals							0	0			
V	etc. For use with separate laser transmitter (e.g. XT22/XT24) and bore brackets.											
t	EASYTREND™ Monitor and record machine movement over time.								\bigcirc			
	(NOTE: The EasyTrend™ program requires DM-brackets.)											
	BELT TRANSMISSION ALIGNMENT				$\overline{\bigcirc}$							
000	(NOTE: The Belt alignment program requires XT190 BTA.)				O							
	VIBRATION MEASUREMENT				$\overline{}$							
	(NOTE: The Vibration measurement program requires XT280 VIB.)				O							
	p. 20. a											



Power up with Easy-Laser PLUS™

Easy-Laser PLUS™ is our cloud solution where you:

- Collaborate with your maintenance team on job assignments.
- Collect all your team's measurement data in one place for quick overview and analysis.
- Copy your measurement data to a new device if your tablet is lost or damaged.
- Restore accidentally deleted files on your tablet.
- Receive information about the latest software updates.

This is just the beginning. Easy-Laser PLUS™ will offer more possibilities that complement your measuring instrument and make it even more powerful.

For Easy-Laser XT systems


Easy-Laser PLUS™ works with the XT app on third party tablets/smartphones, and with our XT12 or XT11 rev2 tablets. In your account you pair your device/devices, making the data instantly available in the system everytime wifi is available (or 4G/5G if applicable). You access Easy-Laser PLUS™ from your web browser. All data are securely transferred with SSL/TLS encryption. The data is only accessible for those who have the right user level. At introduction the secure servers are located in the EU.

Get it now!

To start a subscription, visit *easylaser.plus* and register your account in a few easy steps. When you create a new account for your organization, you get a free trial period of 90 days. After this period has ended, you can choose to continue using the service with our yearly or monthly subscription plans. You can learn more about User agreements and Data protection on *easylaser.com*.

How does it work?

In Easy-Laser PLUS™ you organize your data in "workspaces", in a way that makes most sense for you and your team. For example a project, team, customer or machinery workspace. Once you have created your workspace, you can start inviting team members.

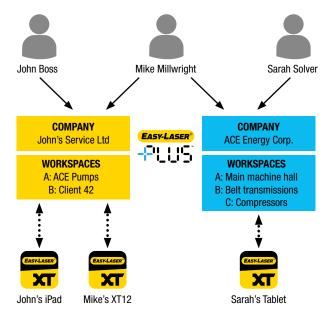

Above is an example of setups/workflows with Easy-Laser PLUS™.


- The organization (your company account) controls user access.
- You set different user roles (Administrator, Contributor or Viewer).
- Users can access one or more account.
- Each XT app can be paired with one account.

You pair your devices (or XT apps, that is), making them instantly available in Easy-Laser PLUS™.

NOTE: Requires XT App ver 9.0 or higher.

The most user-friendly

precision laser transmitters ever designed!

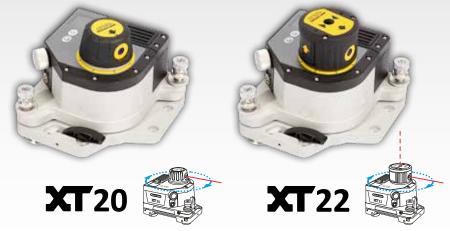

Two models are available

Both transmitters can be used for flatness and straightness measurement. In addition, the XT22 can direct the laser beam at 90 degrees to the laser plane, which means you can solve virtually all types of geometric measurement jobs. The XT22 also has a higher technical specification for straightness thanks to fiber laser technology, and can take measurements at distances up to 40 m. The XT20 can take measurements at distances up to 20 m, but is also IP55 rated water and dust proof. Find out more in the technical specifications section at the end of this catalogue.

New technology improves reliability

We have installed electronic precision vials in the XT transmitters. This gives the advantage of faster feedback when levelling and less risk of errors during calibration, because all users see the same angular value (compared with reading spirit levels). The laser transmitters are wirelessly connected to the XT Alignment app. In this way, the user can be guided



during calibration and the measurement procedure. In the event of temperature changes, vibrations or impacts that can affect the measurement result negatively, the app gives a warning during measurement. Data about the transmitter and measurement environment can be downloaded together with the report. This all provides greater reliability and traceability for your measurement jobs.

Functions for easier use

The rotating head is completely stable and retains its position during measurement. At the same time, it is easy to set the pointing direction of the laser beam to hit the detector, even at distances up to 40 m. We guarantee that this will be very much appreciated by users out in the field. All operation is also managed without the need to lock/unlock rotation, which facilitates use considerably.

Just like Easy-Laser's previous laser transmitter, the new XT20/XT22 can be mounted and positioned in many different ways: with integrated super magnets, on rods to be height adjustable, on stands and magnetic feet etc. We know that this is an important factor in practice to combat all those situations the user faces in reality.

Developed for use with the XT Alignment app

The XT20 and XT22 are used with the Values, Basic Flatness and Straightness programs in the XT Alignment app. The laser transmitters can be purchased separately (as a kit with charger and bracket) but are also included in complete systems, such as the XT770 GEO. The XT70-M device can be used as a detector. They can also be used with E series detectors. Note, however, that the XT Alignment app is required to calibrate the electronic precision vials, and other things in the design of the XT transmitters differ from previous products. They can therefore not be exchanged straight off. Ask your local distributor before purchase.



The Straightness program.



The program for basic flatness.



Calibrating the electronic precision levels is super easy with the step-by-step guidance provided by the software.



The built-in sensors warns on the display on events which can affect the measurement reliability.

[This page left blank intentionally]

EASY-LASER®

COMPLETE SYSTEMS

Note: In this catalogue revision 25 all Eseries systems are removed because they are discontinued. Please check with your local distributor for replacement solutions.





















Easy-Laser® XT770 Shaft+GEO

Part No: 12-1128 (System with XT20 Laser transmitter)
Part No: 12-1334 (System with XT22 Laser transmitter)

For installation and maintenance of all types of rotating machinery

The XT770 Shaft + GEO system has all the programs and functions you need to keep your machines up and running. Configured for installation and overhaul of rotating machinery, like e.g. gas compressors. Programs for alignment of horizontal, vertical/flange mounted machines, machine trains and cardan/offset mounted machines* plus EasyTrend for dynamic measurements* are included.

Functions for soft foot check, thermal growth compensation and tolerance check. Flatness program for measurement of foundations and top frames. Twist measurement program for quick base flatness check. The very versatile Values program, together with the dot-type laser technology adds functionality for e.g. checking bearing clearance.

XT70 measuring units

The XT70 units allow for multipoint, continuous sweep and uncoupled sweep measurements. They also support the 360°LIVE move feature.

- Large 20x20 mm [0.79 x 0.79"] 2 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit. Choose it with or without IR camera.

Geometric measurements

Includes laser transmitter XT20 or XT22, which provides geometrical measurements with the highest reliability and precision. For bore alignment, please see Part No. 12-1381 and 12-1355.

The XT770 Shaft + GEO system contains:

- 12-1272 (1) Laser transmitter XT20
- 12-1273 (1) Laser transmitter XT22
- 12-1275 1 Multi-bracket for XT laser transmitter
- 12-1300 1 Mounting screws for XT transmitters
- 12-1045 1 Measuring unit XT70-M
- 12-1046 1 Measuring unit XT70-S
- 12-0963 2 Shaft bracket with chain and rods
- 12-1008 2 Offset bracket for XT-series
- 12-0013 1 Magnet base
- 12-1133 1 Magnet base with turnable head
- 01-2117 4 Rods 75 mm 01-0873 8 Rods 120 mm
- 01-0873 8 Rods 120 mm 12-0128 1 Extension cha
- 12-0128 1 Extension chain (2x900 mm)
- $03\text{-}1707 \quad 1 \quad \text{Measuring tape 5 m}$
- 03-0967 1 Hexagon wrench set
- 03-1256 1 Battery charger (100-240 V AC)
- 12-0989 1 DC split cable for charging
- 12-0751 1 DC to USB adapter, for charging
- 05-0913 1 Quick manual (Note: Refers to English manual)
- 03-0878 1 Cleaning cloth for optics
- 03-0914 1 USB memory stick with documentation
- 04-0307 1 Set of QR code stickers
- 12-1418 1 Carrying case Medium GEO, with wheels WxHxD: 550x430x250 mm [21.6x16.9x9.8"] Weight: 17.0 kg [37.5 lbs] (with XT20)

Weight: 17.2 kg [37.9 lbs] (with XT22)
(1) = Included depending on system Part No.

Laser transmitter XT20 and XT22

Learn about the differences at page 9, and in the Technical specifications section at the end of this catalogue.

Add display unit XT12:

12-1292 1 XT12 with IR Camera

12-1291 1 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT770:

- 12-0997 1 Shoulder strap for display unit XT12
- 12-1151 1 Cardan bracket kit
- 12-1130 1 Dynamic measurement brackets (complete kit)
- 12-1147 1 Magnetic bracket for XT-series
- 12-1012 1 Thin shaft bracket for XT-series
- 12-1010 1 Sliding bracket for XT-series


XT Laser transmitter Upgrade Kits for older XT770 systems:

These kits are for upgrading of older versions of XT770. The interior of the included case fits XT12. Ask your local distributor for more information.

- 12-1320 1 Upgrade kit XT20
- 12-1321 1 Upgrade kit XT22

Please also see the Programs and functions overview on page 7.

- Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download
- * Requires accessories.

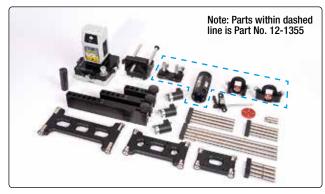



















Bore kits for Easy-Laser® XT770

Part No: See below.

Bore alignment for XT

Easy-Laser® XT770 is the perfect starting point for most of your alignment jobs on rotating machinery. The two kits on this page are adding the possibility to deal also with bore applications. Choose if you want the round bore detector XT9 or not. One reason can be that you need to measure smaller diameters (see below).

Bore Bracket kit, with XT24

With this kit added to your XT770 you use the XT70-M unit in your system as detector. Using the XT70-M you can measure diameters 130-500 mm [5.12-19.68"].

Bore Upgrade kit, with XT9

With this kit added you can measure diameters 80-500 mm [3.15-19.68"]. You need "Kit with XT24" as the starting point to get the laser transmitter, all necessary brackets and the carrying case. "Kit with XT9" will then be put in the same case (see pictures).

Many mounting options

The detectors and brackets can be mounted in many different ways. Below are some examples of what is possible. For more options and measurable diameters, please see section Technical specifications.

Please also see the Programs and functions overview on page 7.





Bore bracket kit, with XT24 (Part No. 12-1381)

12-1371	1	Laser transmitter XT24
12-0455	1	Slide bracket Small
12-0543	1	Slide bracket Medium
12-0510	1	Slide bracket Large
12-1368	1	Axial support for slide brackets
12-1161	1	Set of rods 4x75 mm
12-0987	1	Set of rods 4x120 mm
12-0060	1	Set of rods 4x240 mm

Offset hub with counterlock and tilt function for XT24 12-1375

12-0707 1 Arm kit with magnets

12-1277 1 Bracket with rotatable bore probe 12-1357 Target for detector rough alignment 1

12-1383 1 Carrying case

WxHxD: 460x350x175 mm [18.1x13.1x6.9"]

Weight: 10.2 kg [22.5 lbs]

Bore Upgrade kit, with XT9 (Part No. 12-1355)

12-1350	1	Detector XT9
12-0768	1	Slide bracket 25 mm width
12-0767	1	Rod adapter with built-in target C-C 40 mm
12-1351	1	Rod adapter with built-in target C-C 56 mm Weight: 532 g [1.17 lbs]

Examples of accessories:

12-0990 1 Adjustable magnet for offset hub arms



















Easy-Laser® XT770 Shaft

Part No: 12-1096

For all types of rotating machinery

The XT770 system has all the programs and functions you need to keep your machines up and running.

Programs for alignment of horizontal, vertical/flange mounted machines, machine trains and cardan/offset mounted machines* plus EasyTrend for dynamic measurements* are included.

Functions for soft foot check, thermal growth compensation and toler-

With the Twist measurement program you easily check the base flatness. The very versatile Values program, together with the dot-type laser technology adds functionality for e.g. checking bearing clearance.

XT70 measuring units

The XT70 units allow for multipoint, continuous sweep and uncoupled sweep measurements. They also support the 360°LIVE move feature.

- Large 20x20 mm [0.79x 0.79"] 2 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit. Choose it with or without IR camera.

Geometric measurements

Add the possibility for geometric measurements, now or in the future. For general applications, please see Part No.12-1128 and 12-1334. For bore alignment, please see Part No. 12-1354 and 12-1355.

Please also see the Programs and functions overview on page 7.

System XT770 contains:

12-1045	1	Measuring unit X170-M
12-1046	1	Measuring unit XT70-S
12-0963	2	Shaft bracket with chair
12-1008	2	Offset bracket for XT-ser

n and rods 120 mm

uttset bracket for XT-series

12-0013 2 Magnet bases 01-0873 Rods 120 mm

01-2117 4 Rods 75 mm

12-0128 Extension chain (2x900 mm) 1

03-1707 Measuring tape 5 m 1 03-0967 1 Hexagon wrench set

03-1256 1 Battery charger (100-240 V AC) 12-0989 DC split cable for charging 1

12-0751 DC to USB adapter, for charging

05-0913 Quick manual (Note: Refers to English manual) 1

03-0878 1 Cleaning cloth for optics

03-0914 USB memory stick with documentation 1

04-0307 1 Set of QR code stickers

12-0973 Carrying case Medium

WxHxD: 460x350x175 mm [18.1x13.8x6.9"]

Weight: 9.1 kg [20.0 lbs]

Add display unit XT12:

12-1292 1 XT12 with IR Camera

12-1291 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT770:

12-0997 Shoulder strap for display unit XT12

Cardan bracket kit 12-1151

Dynamic measurement brackets (complete kit) 12-1130

12-1147 Magnetic bracket for XT-series Thin shaft bracket for XT-series 12-1012 1

12-1010 Sliding bracket for XT-series 1

12-1053 1 XT190 BTA Digital belt alignment tool

12-1090 XT280 Vibrometer 1

12-1354 1 Bore bracket kit

12-1355 Bore upgrade kit

XT Laser transmitter Upgrade Kits for older XT770 systems:

These kits are for upgrading of older versions of XT770. The interior of the included case fits XT12. Ask your local distributor for more information.

12-1320 1 Upgrade kit XT20

12-1321 1 Upgrade kit XT22

¹ Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download

Requires accessories.



















Easy-Laser® XT660 Shaft

Part No: 12-1058

For all types of rotating machinery

The XT660 system comes with programs for alignment of horizontal, vertical/flange mounted machines, machine trains (3 machines) and cardan/offset mounted machines*.

Functions for soft foot check, thermal growth compensation and tolerance check.

With the Twist measurement program you easily check the base flatness. The very versatile Values program, together with the dot-type laser technology adds functionality for e.g. checking bearing clearance.

XT60 measuring units

The XT60 units allow for multipoint, continuous sweep and uncoupled sweep measurements.

- Large 20x20 mm [0.79x 0.79"] 1 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit. Choose it with or without IR camera.

Please also see the Programs and functions overview on page 7.

System XT660 contains:

-				
12-1028	1	Measuring unit XT60-M		
12-1029	1	Measuring unit XT60-S		
12-0963	2	Shaft bracket with chain and rods 120 mm		
01-2117	4	Rods 75 mm		
12-0128	1	Extension chain (2x900 mm)		
03-1707	1	Measuring tape 5 m		
03-0967	1	Hexagon wrench set		
03-1256	1	Battery charger (100-240 V AC)		
12-0989	1	DC split cable for charging		
12-0751	1	DC to USB adapter, for charging		
05-0863	1	Quick manual (Note: Refers to English manual)		
03-0878	1	Cleaning cloth for optics		
03-0914	1	USB memory stick with documentation		
04-0307	1	Set of QR code stickers		
12-0973	1	Carrying case Medium		
		WxHxD: 460x350x175 mm [18.1x13.8x6.9"]		
		Weight: 6.8 kg [14.9 lbs]		

Add display unit XT12:

12-1292 1 XT12 with IR Camera

12-1291 1 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT660:

12-0997	1	Shoulder strap for display unit XT12
12-0013	1	Magnet base (Note: offset bracket also needed for C-C 56 mm.)
12-1008	1	Offset bracket for XT-series
12-1147	1	Magnetic bracket for XT-series
12-1012	1	Thin shaft bracket for XT-series
12-1010	1	Sliding bracket for XT-series
12-1161	1	Rods (4x75 mm)

12-1161 1 Rods (4x75 mm) 12-0324 1 Rods (8x120 mm)

12-0060 1 Rods (4x240 mm)

12-1053 1 XT190 BTA Digital belt alignment tool

12-1090 1 XT280 Vibrometer

12-1244 1 XT290 Digital precision level

Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download

^{*} Requires accessories.























Easy-Laser® XT550 EX Shaft

Part No: 12-1031

Shaft alignment system for hazardous areas

Easy-Laser® XT550 is designed for use in potentially explosive environments. It has all the programs and functions you need to keep your machines up and running.

Programs for alignment of horizontal, vertical/flange mounted machines, machine trains and cardan/offset mounted machines*. Functions for soft foot check, thermal growth compensation and tolerance check. With the Twist measurement program you easily check the base flatness.

The very versatile Values program, together with the dot-type laser technology adds functionality for e.g. checking bearing clearance.

XT50 measuring units

The XT50 units allow for multipoint, continuous sweep and uncoupled sweep measurements.

- Large 20x20 mm [0.79x 0.79"] 1 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 20 h.

Multi-platform alignment system

For a complete system, add the zone 1/21 approved ecom display unit. Built-in 13+8 MP cameras (rear+front) for documentation. The XT Alignment app also runs on other iOS and Android units. $^{\rm 1\,2}$

For local purchase, find your ecom reseller here:

https://www.ecom-ex.com/company/locations/

Please also see the Programs and functions overview on page 7.

The XT550 system contains:

- 12-1026 1 Measuring unit XT50-M EX
- 12-1027 1 Measuring unit XT50-S EX
- 12-1040 2 Shaft bracket EX, with chain and rods
- 12-1161 1 Set of Rods 4x75 mm
- 01-0873 2 Rods 120 mm
- 12-1038 2 Extension chain EX (900 mm)
- 03-1707 1 Measuring tape 5 m
- 03-0967 1 Rod tool
- 12-1281 1 Battery charger EX (100-240 V AC)
- 12-0989 1 DC split cable for charging
- 05-0889 1 Quick manual EX (Note: Refers to English manual)
- 03-0878 1 Cleaning cloth for optics
- 03-0914 1 USB memory stick with documentation
- 04-0307 1 Set of QR code stickers
- 12-1063 1 Carrying case EX, made of conductive plastics
 WXHXD: 450x300x180 mm [17.7x11.8x7.1"]

Weight: 6.9 kg [15.2 lbs]

Add display unit ecom:



Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download

Examples of accessories for XT550:

- 12-0013 1 Magnet base (Note: offset bracket also needed for C-C 56 mm.)
- 12-1008 1 Offset bracket for XT-series
- 12-1147 1 Magnetic bracket for XT-series
- 12-1012 1 Thin shaft bracket for XT-series
- 12-1010 1 Sliding bracket for XT-series
- 12-1161 1 Rods (4x75 mm)
 - 12-0324 1 Rods (8x120 mm)
- 12-0060 1 Rods (4x240 mm)

CERTIFICATIONS:

XT50 measuring units:

EX certificate number: Presafe 17 ATEX 10552X, IECEx PRE 17.0049X EX classification: B II 2 G Ex ib op is IIC T4 Gb, -10°C \leq Ta \leq +50°C B II 2 D Ex ib op is IIIC T135°C Db, -10°C \leq Ta \leq +50°C

Note! The EX rating above is valid for the XT50 measuring units only, Part No. 12-1026 and 12-1027. Brackets, fixturing equipment, case, and other accessories are not subject to any EX classification, and must be assessed by the user before use in EX environment. Easy-Laser does not take responsibility for the EX safety of accessories.

ecom display unit Tab-Ex 03 DZ1:

EX certificate number: EPS 22 ATEX 1055 X, IECEX EPS 22.0014X ATEX/UKCA Ex classification: ⓐ II 2G Ex db ia IIC T6 Gb IP64, $-20^{\circ}\text{C} \le \text{Ta} \le +55^{\circ}\text{C}$, ⓐ II 2D Ex ia tb IIIC T80°C Db, $-20^{\circ}\text{C} \le \text{Ta} \le +55^{\circ}\text{C}$ IECEX classification: Ex db ia IIC T6 Gb IP64, $-20^{\circ}\text{C} \le \text{Ta} \le +55^{\circ}\text{C}$,

Ex ia tb IIIC T80°C Db, -20°C \leq Ta \leq +55°C

² For use in potentially explosive environments, the display device you use has to be at least approved for the same level of EX requirements as your work zone. Note that the XT12 isn't EX approved.

^{*} Requires accessories.



















Easy-Laser® XT440 Shaft

Part No: 12-0966

The mid-range entry level system!

The XT440 system comes with programs for alignment of horizontal and vertical/flange mounted machines.

Added to that are functions for soft foot check, thermal growth compensation and tolerance check.

The very versatile Values program adds functionality that normally only comes with mid-range systems, for example checking bearing clearance.

XT40 measuring units

- Large 30 mm [1.2"] 1 axis TruePSD detectors.
- Line laser technology for easy and quick operation.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit. Choose it with or without IR camera.

Please also see the Programs and functions overview on page 7.

The XT440 system contains:

THE XI	+40	system contains.
12-0943	1	Measuring unit XT40-M
12-0944	1	Measuring unit XT40-S
12-0963	2	Shaft bracket with chain and rods 120 mm
01-2117	4	Rods 75 mm
03-1707	1	Measuring tape 5 m
03-0967	1	Hexagon wrench set
03-1256	1	Battery charger (100-240 V AC)
12-0989	1	DC split cable for charging
12-0751	1	DC to USB adapter, for charging
05-0833	1	Quick manual (Note: Refers to English manual)
03-0878	1	Cleaning cloth for optics
03-0914	1	USB memory stick with documentation
04-0307	1	Set of QR code stickers

12-0973 1 Carrying case Medium

WxHxD: 460x350x175 mm [18.1x13.8x6.9"] Weight: 6.0 kg [13.3 lbs] Add display unit XT12:

12-1090 1 XT280 Vibrometer 12-1244 1 XT290 Digital precision level


12-1291 1 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT440:

12-0997	1	Shoulder strap for display unit XT12
12-1378	1	Bracket accessory kit
12-0013	1	Magnet base (Note: offset bracket also needed for C-C 56 mm.)
12-1008	1	Offset bracket for XT-series
12-1147	1	Magnetic bracket for XT-series
12-1012	1	Thin shaft bracket for XT-series
12-1010	1	Sliding bracket for XT-series
12-1161	1	Rods (4x75 mm)
12-0324	1	Rods (8x120 mm)
12-0060	1	Rods (4x240 mm)
12-0128	1	Extension chain (2x900 mm). For diameters up to 450 mm [12.7"].
12-1053	1	XT190 BTA Digital belt alignment tool

Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download

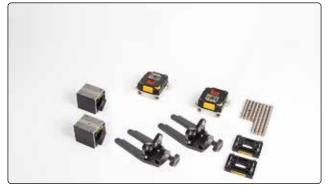

















Easy-Laser® XT660 Shaft SG1

Part No: 12-1389

For alignment of generator to gearbox on wind turbines

This version of the XT660 system has brackets included for use on Siemens Gamesa (SG) turbines of different models. Functions for soft foot check, thermal growth compensation and tolerance check are included. By adding accessory brackets like V-brackets you can also use the system to align many other types of rotating machinery.

XT60 measuring units

The XT60 units allow for multipoint, continuous sweep and uncoupled sweep measurements.

- Large 20x20 mm [0.79x 0.79"] 1 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit, but please note that there is no space for XT12 in this case. You can however place a third party tablet in the case lid compartment (WxHxD: 250x220x20 mm).

Please also see the Programs and functions overview on page 7.

System XT660 Shaft SG1 contains:

12-1028	1	Measuring unit XT60-M
12-1029	1	Measuring unit XT60-S
01-2117	4	Rods 75 mm
01-0873	4	Rods 120 mm
12-0013	2	Magnet base
12-1008	2	Offset bracket for XT series
12-1373	2	Flange clamping bracket
03-1707	1	Measuring tape 5 m
03-0967	1	Hexagon wrench set
03-1256	1	Battery charger (100-240 V AC)
12-0989	1	DC split cable for charging
12-0751	1	DC to USB adapter, for charging
05-0863	1	Quick manual (Note: Refers to English manual)
03-0878	1	Cleaning cloth for optics
03-0914	1	USB memory stick with documentation
04-0307	1	Set of QR code stickers
12-0973*	1	Carrying case Medium (*with SG1 insert added)

WxHxD: 460x350x175 mm [18.1x13.8x6.9"]

Please note that in this case there is no space for an XT12 display unit.

Examples of accessories for XT660 Shaft SG1:

12-0963 1 Shaft bracket with chain and rods 120 mm

12-1147 1 Magnetic bracket for XT-series

12-1161 1 Rods (4x75 mm)

12-0324 1 Rods (8x120 mm)

12-0060 1 Rods (4x240 mm)

Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download



















Easy-Laser® XT660 Shaft WMB

Part No: 12-1393

For alignment of generator to gearbox on wind turbines

The XT660 WMB (Wind Multi-Brand) system has brackets included for use on multiple brands and models. The addition of brackets are what sets this system apart from the standard XT660 system. Functions for soft foot check, thermal growth compensation and tolerance check are included.

XT60 measuring units

The XT60 units allow for multipoint, continuous sweep and uncoupled sweep measurements.

- Large 20x20 mm [0.79x 0.79"] 1 axis TruePSD detectors.
- Dot-type laser technology for accuracy and versatility.
- Rugged design, IP66/67 approved, featuring wireless technology.
- Built-in OLED display shows battery status and the angular value of the unit for easy positioning.
- Integrated rechargeable battery, operating time 24 h.

Multi-platform alignment system

The XT Alignment App runs on your iOS and Android unit¹. You can also choose to add our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT12 display unit. Choose it with or without IR camera.

Please also see the Programs and functions overview on page 7.

System XT660 Shaft WMB contains:

- Measuring unit XT60-M 12-1028 1
- 12-1029 Measuring unit XT60-S 1
- 12-0963 2 Shaft brackets with chain and rods 120 mm
- 4 01-2117 Rods 75 mm
- Rods 120 mm 01-0873 4
- 12-0128 1 Extension chain (2x900 mm)
- 12-0013 2 Magnet base
- 12-1008 Offset bracket for XT series
- 12-1373 2 Flange clamping bracket
- 03-1707 1 Measuring tape 5 m
- 03-0967 1 Hexagon wrench set Battery charger (100-240 V AC) 03-1256
- 12-0989 DC split cable for charging
- 12-0751 DC to USB adapter, for charging 1
- Quick manual (Note: Refers to English manual) 05-0863
- 03-0878 Cleaning cloth for optics
- USB memory stick with documentation 03-0914 1
- 04-0307 Set of QR code stickers 1
- 12-0973 1 Carrying case Medium

WxHxD: 460x350x175 mm [18.1x13.8x6.9"]

Add display unit XT12:

12-1292 1 XT12 with IR Camera

12-1291 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT660 Shaft WMB:

Shoulder strap for display unit XT12 12-0997 1

12-1161 1 Rods (4x75 mm) 12-0324 1

Rods (8x120 mm)

12-0060 1 Rods (4x240 mm)

¹ Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download





Shaft alignment system for Vestas wind turbines

Part No: 12-1284 (Vestas 5.5 - Mechanical bracket kit)

Part No: 12-1142 (Vestas 6/VT20025635) **Part No:** 12-1183 (Installation Kit Upgrade)

For shaft alignment with the rotor locked.

Large forces are in action in a wind turbine. The safety of the maintenance technicians is therefore of the utmost importance. With the Easy-Laser® shaft alignment system the generator and gearbox can be aligned with the coupling dismounted and the brake locked.

Mechanical bracket kit, Vestas 5.5.

Supplement Service kit, Vestas 6.

Installation Kit Upgrade

If you have an older system Vestas 4 you can upgrade this for use at MK3E.

Please note that the brackets in all kits now fit both old E-series and new XT-series measuring units. The picture of 12-1142 shows brackets with older, discontinued rotational unit.







A Vestas 5.5 system contains:

12-0712 5 Nut to adapters with magnet M6 V112

12-0714 4 Screw to Adapters V112, L=75mm

12-0713 2 Fixture Kit for V112

01-1520 4 Adaptor for fixture V112

03-0613 1 Distance gauge incl. adaptor, incl. fastening screw L=35mm

03-1034 1 Adaptor, incl. fastening screw L=55mm

01-2163 1 Bushings for MK3E / V150

01-2142 1 Bushings for MK3E / V150

01-2143 2 Washer for MK3E / V150

12-1140 2 Screw to bushings V150 L=45mm

03-0824 1 Measurement tape 3m

12-1164 1 Carrying Case Vestas 5

Weight: 25 kg [55.1 lbs]

WxHxD: 670x600x220 mm [26.4x23.6x8.7"]

A Vestas 6 system contains:

12-0703 1 Detector-fixture Generator flange

12-0297 2 Screw knob to Generator fixture M12 12-0298 2 Screw knob to Generator fixture M16

12-0718 1 Detector-fixture Gearbox flange

01-0815 3 Adapter for Gearbox fixture 25 mm

01-0816 3 Adapter for Gearbox fixture 24 mm

01-0817 3 Adapter for Gearbox fixtrure 22 mm

01-0818 3 Adapter for Gearbox fixture 17 mm

12-0296 3 Screw to adapters

12-0299 4 Nut to adapters with magnet M6

12-1165 1 Carrying case Vestas 6

Weight: 12.3 kg [27.1 lbs

WxHxD: 570x470x220 mm [22.4x18.5x8.7"]

A Vestas Laser Installation Upgrade Kit contains:

12-1154 1 Bushings for MK3E, set of 2

12-1164 1 Carrying case Vestas 5

12-1165 1 Carrying case Vestas 6



Bracket kit GA1 for wind turbines

Part No: 12-1114

For shaft alignment with the rotor locked.

Large forces are in action in a wind turbine. The safety of the maintenance technicians is therefore of the utmost importance. With the Easy-Laser® shaft alignment system the generator and gearbox can be aligned with the coupling dismounted or in place. This bracket kit is designed especially for Gamesa turbines, and fits turbine types according to image below.

Note: brackets fit both Easy-Laser E-series and XT-series measuring units.











1	JOINT ELEMEN	TURBINE MODEL				
M2	4 bolts + small bushings	G9X-G114 2.0 MW; G114 2.5 MW				
M3	0 bolts + large bushings	G126 2.5 MW; G1	32 3.3 MW			
G9X	G114 2.0MW	G114 2.5 MW	G126 2.5 MW	G132 3.3 MW		
000	0	0	(3)	600		
12.3	G	6-	(6 5)			

System 12-1114 contains:

12-0975	1	Detector-fixture	Generator flance GA1

^{01-1889 2} Adapters to Generator flange GA1 M24

Weight: 17.0 kg [37.5 lbs]

WxHxD: 565x455x210 mm [22.2x17.9x8.2"]

^{01-1892 2} Adapters to Generator flange GA1 diameter 40 mm

^{01-1891 2} Adapters to Generator flange GA1 diameter 31 mm

^{01-1890 2} Adapters to Generator flange GA1 diameter 25 mm

^{12-0974 2} Screw to Adapters L=120 mm

^{12-0712 2} Nut to adapters with magnet M6

^{12-0976 1} Detector-fixture Gearbox flange GA1

^{12-0977 3} Screw M24 for Gearbox fixture

^{12-0978 3} Screw M30 for Gearbox fixture

^{01-1884 3} Adapters for M24 Screw to Gearbox fixture

^{01-1885 3} Adapters for M30 Screw to Gearbox fixture

^{03-0613 1} Distance Gauge (coupling flanges), incl. adapter

^{03-1034 2} Ext. adapter distances gauge

^{12-1116 1} Plastic carrying case for 12-1114




















XT app for XT12/XT11 and iOS/Android display units.



Belt alignment program for E51 and E52.

Easy-Laser® XT190 BTA digital Wireless

Part No: 12-1053

"Live" digital read outs on clear OLED display

The detector reads off the position in relation to the laser plane and digitally displays the parallel and angular misalignment "live" on the clear built-in OLED display. The accuracy of the reading means that you can be within the prescribed alignment tolerances and rely upon the result. Suitable for most types of drive, such as V-belt, timing belt, flat belt and chain drives.

The laser transmitter has two power modes (high/low) which now makes it possible to measure on very long distances. The low power mode saves battery life.

If you connect the detector wirelessly to a separate display unit, e.g. one of our shaft alignment systems, you can read and follow the alignment from where you are standing and making adjustments, instead of only where the detector is mounted. Then you can also set a tolerance and document the result of the alignment.

(Note 1: The XT190 detector unit connects to both the E- and XT-series display units. You can also use it with your iOS and Android phone/tablet. Please see our web site for compatible models.)

(Note2: There is no separate display unit included. The detector connects wireless to the E51/E52 and XT12/XT11 display units with Belt alignment program.)

A complete system contains:

12-1325 1 Laser transmitter

12-1054 1 Detector unit with built-in display, wireless

12-0394 2 Targets

03-1256 1 Charger (100-240 V AC) and cable

03-0247 1 Battery R6 (AA) 1.5 V

03-0914 1 USB memory stick with documentation

05-0865 1 Quick manual (Note: Refers to English manual)

12-0804 1 Carrying case







Easy-Laser® D92 BTA

Part No: 12-1332

For quick and easy alignment of sheaves/pulleys

Easy-Laser® D92 is installed in a few seconds, and the laser line that is projected on the targets clearly shows how to adjust the machines. The tool has targets that can be read out "visually" and which give excellent degrees of accuracy that are sufficient for most users.


The laser transmitter has two power modes (high/low) which now makes it possible to measure on very long distances. The low power mode instead saves battery life.


If, in the future, you wish to have the option of digital readouts with the corresponding advantages, you can add a digital detector (see system XT190).

D92 BTA is compact and light. Suitable for most types of drive, such as V-belt, timing belt, flat belt and chain drives.





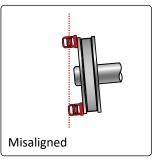

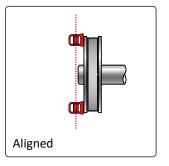

A complete system contains:

12-1325 1 Laser transmitter

12-0394 2 Target

05-0352 1 Manual

1 Battery R6 (AA) 1.5 V 03-0247

03-0591 1 Padded cover














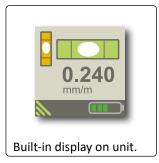





XT app for XT12/XT11 and iOS/Android display units.



Legs for measurement on large cylindrical surfaces.

Easy-Laser® XT290 Digital precision level

Part No: 12-1244

For reliable machinery installation

Digital levels are extremely useful tools for setting-up and aligning most types of machines, for example, levelling machine bases, rolls, tables, etc. 0.1 mm/m [mils/inch] is a normal requirement for level at machine installations to ensure correct functionality. Other applications include checking straightness, flatness and parallelism. Easy-Laser® XT290 is simply the must-have addition to your laser-based alignment system.

Accuracy is guaranteed by the precision-ground, hardened steel base. Wide measurement range, very fast inclinometer/value stabilisation, and an easy-to-read TFT colour display with graphics makes the measurement procedure quick and easy. Two mounting holes allow for your own adaptations and brackets.

Connect to a separate display unit

The XT290 connects to the free XT Alignment app (iOS/Android) and our XT12/XT11 display unit. Using a separate display unit, for example your smartphone, makes it all even easier as you can read off and follow the adjustment at the point on the machine where the adjustment is made. It is also safer for some applications, where you can leave the unit inside the safety fence, then follow the measurement outside it.

You can make a measurement report with pictures and share it (PDF and Excel). Using the app you can also record values during a set time and frequency, i.e. dynamic measurements. Another possibility with the app is to connect up to four digital levels (or e.g. two levels and two measuring units) at the same time, displayed in the same screen view.

Precision level accuracy: ± 0.02 mm/m $\pm 1\%$ [± 0.02 mils/inch $\pm 1\%$] Inclinometers accuracy: $\pm 0.2^\circ$ (within range $\pm 5^\circ$), $\pm 1^\circ$ (within range $\pm 180^\circ$) Please see chapter *Technical specifications and drawings* for more data. (Note: The XT290 does not work with the E-series display units. You can of course still use it as a separate tool.)

A complete system contains:

12-1241 1 Digital Precision Level

01-1402 1 Screw for mounting safety strap*

03-1256 1 Charger (100–240 V AC) and cable 03-0914 1 USB memory stick with documentation

05-0990 1 Quick manual (Note: Refers to English manual)

12-1243 1 Carrying case

Complete system:

Weight: 2.2 kg [4.85 lbs]

WxHxD: 270x240x120 mm [10.6x9.4x4.7"]

Examples of accessories:

12-0901 1 Legs for measurement on cylindrical surfaces 55-800 mm

03-1406 1 Safety strap Bahco 3875-LY2*


*Please note that safety regulations differ from country to country.










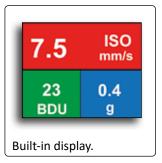









XT280 Vibrometer

Part No: 12-1090

FOR QUICK VIBRATION ANALYSIS

Easy-Laser® XT280 is an easy-to-use vibration monitoring and analysis tool that allows easy display of vibration signals. The XT280 automatically performs vibration analysis functions based on machine running speed to help diagnose faults such as unbalance, misalignment and looseness. The system is designed to enable you to take vibration measurements from assets like pumps, motors, fans and bearings. The unit displays vibration frequency plots and allows vibration severity and bearing condition to be monitored.

For documentation purpose, you can connect the XT280 to the XT Alignment App. Run the app on your phone or tablet*, or the XT12/XT11 display unit.

* Please see our web site for compatible models.

A complete system contains:

12-1050 1 Vibrometer (with short tip)

05-0934 1 Quick manual

03-0914 1 USB memory stick with documentation

03-1336 1 Padded case

Examples of accessories:

03-1327 1 Accelerometer magnet

03-1326 1 Stinger (100 mm)



















Easy-Laser® XT980 Sawmill

Part No: 12-1335

Measurement and alignment of sawmill machinery

Easy-Laser® XT980 is a laser based measurement and alignment system that helps sawmills to make optimal use of their machines. By setting the machines up correctly it is possible to maintain a high rate of production with the highest quality end products hour after hour. Laser transmitter XT22 has a manually rotated laser head with an angular prism, making it very versatile and suitable for most geometrical measurements.

With Easy-Laser® XT980 measuring and adjustment of reducers, counterholds, saw blades and discs become a simple and quick task. The laser line works as an absolutely straight ruler for 40 metres, and is very practical for the demanding and dusty environment of a sawmill. It replaces the long wire used traditionally, and gives many more possibilities for aligning the saw equipment. It can be used equally well for circular saws and band saws.

Benefits of using Easy-Laser® XT980 are:

- Higher production speed
- Less unplanned downtime
- · Better product quality
- Longer lifetime for blades
- · Longer lifetime for bearings
- Less vibration
- Less waste material

There is a standard system configuration plus some useful accessories. Together with our Easy-Laser representative, the system is adapted to best fit your actual machinery.

The measurement app runs on your iOS and Android unit¹. You can also choose a complete system with our ergonomic and rugged, IP66/67 approved shock proof Easy-Laser® XT display unit. Choose it with or without IR camera.

Please also see the Programs and functions overview on page 38.

The XT980 system contains:

12-12/3	- 1	Laser transmitter X122
12-1045	1	Measuring unit XT70-M

03-0833 2 Electronic target

12-1275 1 Multi bracket for XT laser

12-1133 1 Magnet base with turnable head

12-0013 1 Magnet base

12-0963 1 Shaft bracket with chain

12-1008 2 Offset bracket

12-0624 2 Bracket for electronic target

12-1209 1 Rotating detector bracket for rods

12-1210 1 Magnet bracket long, with turnable head

12-1211 1 Magnet bracket short, with turnable head

12-1087 1 Set square bracket for index table

12-1083 1 Index table 90°

12-0987 2 Set of Rods (4x120 mm)

12-1161 1 Set of Rods (4x75 mm)

12-1232 2 Large target with magnets

05-0993 1 Quick Guide (English)

 $03\text{-}1707 \quad 1 \quad \text{Measuring tape 5 m}$

12-1299 1 Documentation folder GEO

03-0822 1 USB cable

03-1256 1 Battery charger (100-240 V AC)

12-0989 1 DC split cable for charging

12-0751 1 DC to USB adapter

03-0878 1 Cleaning cloth for optics

03-0914 1 USB memory stick with documentation

03-1419 2 Screw clamps

03-0967 1 Hexagon wrench set

12-1300 1 Toolbox XT GEO

12-1298 1 Transportation case, with wheels

Add display unit XT12:

12-1292 1 XT12 with IR Camera

12-1291 1 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories:

12-0997 1 Shoulder strap for display unit XT12

12-1010 1 Sliding bracket for XT-series

12-0060 1 Rods (4x240 mm)

12-1262 1 Detector bracket for centering on wire position

12-0503 1 Bracket (Set square) for transmitter

12-1123 1 Extension for set square 12-1087, 295 mm

12-1124 1 Extension for set square 12-1087, 430 mm

12-1060 1 Extension chain (2x900 mm). For diameters up to 450 mm [12.7"].

12-1053 1 XT190 BTA Digital belt alignment tool

12-1090 1 XT280 Vibrometer

12-1244 1 XT290 Digital precision level

Complete system:

Weight: 28.0 kg [61.7 lbs]

WxHxD: 622x492x310 mm [24.5x19.4x12.2"]

Please see our web site for a complete list of which tablets we recommend: easylaser.com > support > software download



















Easy-Laser® XT950 Bore alignment With laser transmitter XT24

Part No: 12-1385

Bore alignment for a wide range of applications

The Easy-Laser® XT950 system is primarily designed for applications like engines, compressors and gearboxes, but can be used in many more applications. The XT9 detector makes it possible to measure bores with diameter 80–500 mm [3.15–19.68"] as standard.

The bracket system is very versatile and provides many possibilities to mount the detector in bores with different widths, and they can also be assembled in many ways for different situations. The magnetic feet holds the detector in perfect position for stable and precise measurements.

Learn more about the brackets in the Technical specifications section at the end of this catalogue.

The Bore Center program guides the user through the entire measurement process which contributes to simple operation. The system automatically calculates the bearing journals positions in relation to each other, both horizontally and vertically. You can then evaluate the results with different Best fit calculation methods, analyse different choices of reference points and set tolerance values.

All parts are designed for maximum accuracy and stability, and measure with a resolution of 0.001 mm [0.05 mils]. Measurement distance up to 40 m [130 feet]. Easy-Laser® XT950 is suitable for use both in manufacturing and in field services activities.

Also for other straightness measurements

With the systems, you can also measure the straightness of shafts, linear guides, foundations, etc. without any additional accessories.

System XT950 contains:

12-1371	1	Laser transmitter XT24
12-1350	1	Detector XT9

12-1375 Offset hub with counterlock and tilt function for XT24 1

12-0707 1 Arm kit with magnets 12-1161 1 Set of rods 4x75 mm

Set of rods 4x120 mm 12-0987 Set of rods 4x240 mm 12-0060 1

12-0455 Slide bracket Small 12-0543 Slide bracket Medium 1

12-0510 1 Slide bracket Large

12-1277 1 Bracket with rotatable bore probe, XT 12-1357 Target for detector rough alignment

Axial support for slide brackets 12-1368

12-1351 Rod adapter with built-in target C-C 56 mm 1 12-0767 Rod adapter with built-in target C-C 40 mm Slide bracket, 25 mm width

03-1256 1 Battery charger (100-240 V AC) 03-0914 USB memory stick with documentation

12-0768

1

03-1707 Measuring tape 5 m 1 03-0967 Hexagon wrench set

12-0751 DC to USB adapter, for charging 1 12-0989 1 DC split cable for charging

03-0878 Cleaning cloth for optics 1 12-1384 1

Carrying case Medium BORE, with wheels WxHxD: 546x432x244 mm [21.5x17.0x9.6"] Weight: 15.4 kg [33.9 lbs]

Add display unit XT12:

XT12 with IR Camera 12-1292 1

12-1291 XT12

Weight: 1400 g [49.4 oz]

Examples of accessories for XT950:

12-0997 1 Shoulder strap for display unit XT12

Detector arms Linebore 12-0314

Set of extension arms 12-0282 1

12-0580 1 Axial extension arms

12-0990 1 Adjustable magnet for offset hub arms [This page left blank intentionally]

EASY-LASER®

PARTS

DISPLAY UNITS Easy-Laser® Product overview





XT12 Display unit

Part No: 12-1291

Description: Wireless display unit for Generation XT. Rugged design, shock proof, IP66 and IP67. Glove enabled touch screen. Water and dust proof connectors: USB A, USB C, HDMI, Charger.

Note: Shoulder strap Part No. 12-0997 is not included. Charger is not included. The XT12 is not approved for Ex/ATEX areas.





XT12 Display unit with IR Camera

Part No: 12-1292

Description: Wireless display unit for Generation XT. Rugged design, shock proof, IP66 and IP67. Glove enabled touch screen. Water and dust proof connectors: USB A, USB C, HDMI, Charger.

With built-in thermal camera (IR).

Note: Shoulder strap Part No. 12-0997 is not included. Charger is not

included. The XT12 is not approved for Ex/ATEX areas.





Removal of camera on XT12 Display unit

Part No: 12-1362

Description: If you for security reasons don't want a camera on your

XT12, please order 12-1291 + 12-1362 Removal of camera.

Note: Only possible for new purchases, no retrofit.





ECOM Tab-Ex® 03 DZ1 - Display unit for Generation XT, Intrinsically safe, EX approved

Part No: 12-1327

Description: Wireless display unit for Generation XT, especially the XT50-M/S EX approved shaft alignment measuring units. Rugged de-

sign, with glove enabled touch screen.

Note: For Zone 1/21 & DIV1, not mining. Charger is included.

For more detailed information, please see the ecom web site: https://

www.ecom-ex.com





Laser transmitter XT20


Part No: 12-1272 (only transmitter)

Part No: 12-1293 (Kit in case, incl. Multibracket and charger/cables) **Description:** Laser transmitter XT20 can be used to measure flatness and straightness. The laser beam can sweep 360° with a measurement distance of up to 20 metres [66'] in radius.

Can also be used with D- and E-series systems, but with limitations. Please also see *Technical specifications* at the end of this catalogue.

Note: The laser beam is used only for a 360° sweep.



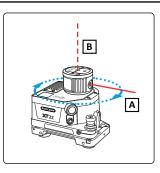

Laser transmitter XT22

Part No: 12-1273 (only transmitter)

Part No: 12-1294 (Kit in case, incl. Multibracket and charger/cables) **Description:** Laser transmitter XT22 can be used to measure flatness, straightness, squareness and parallelism. The laser beam can sweep 360° with a measurement distance of up to 40 metres [132'] in radius. Can also be used with D- and E-series systems, but with limitations. Please also see *Technical specifications* at the end of this catalogue.

Note: Option A. The laser beam is used for a 360° sweep. Option B. The laser beam is pointed 90° to the sweep.





Laser transmitter XT24

Part No: 12-1371

Description: For measuring straightness. M6 threads on ends and sides offer many alternative mounting options. Measurement distance 40 m [130'].

Note: Part No. 12-1375, Offset hub with counterlock and tilt function

for XT24, also needed.





Laser transmitter for sheave alignment systems

Part No: 12-1325

Description: Laser transmitter producing a laser line parallel to the

object it is mounted to.

Note: Only transmitter as pictured, no targets included. (Complete

system, see Part No. 12-1053 and 12-1332.)





Detector XT9, 2-axis PSD

Part No: 12-1350

Description: Detector diameter 44 mm [1.73"]. 2 axis PSD, 20x20 mm [0.79x0.79"]. Built-in 360° electronic inclinometer. Built-in wireless communication and rechargeable battery. Charger connector on one end. Mounting threads on both ends for suitable brackets (e.g. 12-0767 and 12-1351).

Note: Make sure you have a suitable bracket!





XT & E-series wireless Detector for belt alignment

Part No: 12-1054

Description: Detector that reads off the sheaves position in two directions (horizontal+vertical) at the same time. With built-in display showing offset and angular values. Note: Laser transmitter also needed. **Note:** Also for wireless connection to separate display units E51 and E52 which have the BTA digital program. Or connect it to the XT Alignment App on your iOS/Android display, or Easy-Laser XT12/XT11. A. Super magnets x 4, for attachment to sheave side.

MEASURING UNITS

Easy-Laser® Product overview





Measuring unit XT40-M, line laser, PSD 30 mm

Part No: 12-0943

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 30 mm [1.18"].

Note: To be used in pair with S unit 12-0944. XT-series measuring unit.





Measuring unit XT40-S, line laser, PSD 30 mm

Part No: 12-0944

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 30 mm [1.18"].

Note: To be used in pair with M unit 12-0943. XT-series measuring ...

unit.





Measuring unit XT60-M, dot laser, PSD 20x20 mm

Part No: 12-1028

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 20x20 mm [0.79x0.79"].

Note: To be used in pair with S unit 12-1029. XT-series measuring unit.





Measuring unit XT60-S, dot laser, PSD 20x20 mm

Part No: 12-1029

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 20x20 mm [0.79x0.79"].

Note: To be used in pair with M unit 12-1028. XT-series measuring unit.





Measuring unit XT50-M EX dot laser, PSD 20x20 mm

Part No: 12-1026

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 20x20 mm [0.79x0.79"].

Note: Intrinsically safe design. To be used in pair with S unit 12-1027. XT-series measuring unit. Please also read the Technical specifications!





Measuring unit XT50-S EX dot laser, PSD 20x20 mm

Part No: 12-1027

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft alignment. 1 axis PSD 20x20 mm [0.79x0.79"].

Note: Intrinsically safe design. To be used in pair with M unit 12-1026. XT-series measuring unit. Please also read the Technical specifications!

MEASURING UNITS

Easy-Laser® Product overview





Measuring unit XT70-M, dot laser, PSD 20x20 mm, 2-axis

Part No: 12-1045

Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft

alignment. 2 axis PSD 20x20 mm [0.79x0.79"].

Note: To be used in pair with S unit 12-1046, or as a separate detector

for GEO-programs. XT-series measuring unit.





Measuring unit XT70-S, dot laser, PSD 20x20 mm, 2-axis

Part No: 12-1046


Description: Laser diode and PSD detector in one housing. Built-in wireless communication. OLED display shows battery status and angle of the unit on shaft. Built-in electronic 360° inclinometer. For shaft

alignment. 2 axis PSD 20x20 mm [0.79x0.79"].

Note: To be used in pair with M unit 12-1045. XT-series measuring unit.

PARTS Easy-Laser® Product overview



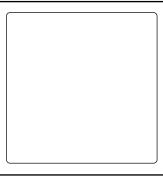

Bracket accessory kit in box

Part No: 12-1378

Description: Includes 2 magnet bases (12-0013), 2 offset brackets (12-1008), 2 extension chains 12-0128), 4 rods 120 mm (01-0873), 1 box

with padding (03-1697).

Note: This box/kit fits in the case for XT440, beneath display unit XT12. Note 1: The box itself is included as standard with XT770 and XT660, but with different content. Please see each system for more info. Note 2: With cutout to fit also 2 pcs Magnetic bracket 12-1147.





Magnet base

Part No: 12-0013

Description: Versatile magnet base with On/Off function and many

optional rod mounting possibilities. Holding power 800N.

Note: Three sides are magnetic. *For use with XT-series offset bracket

12-1008 is also needed.





Magnet base with turnable head

Part No: 12-1133

Description: Versatile magnet base with On/Off function and 360° turnable head with two rod mounting possibilities, for both C–C40 mm and C–C56 mm. It has a screw and washer with which you can lock the top rotation, and therefore still use it for jobs like shaft alignment.

Note: -





Rotating detector bracket for rods

Part No: 12-1209

Description: Allows for 360° swivel.

Note: -





Magnet bracket long, with turnable head

Part No: 12-1210

Description: Allows for 360° swivel.

Note: -





Magnet bracket short, with turnable head

Part No: 12-1211

Description: Allows for 360° swivel.

Note: -





Detector bracket for centering on wire position

Part No: 12-1262

Description: Mainly for sawmill applications.

Note: -





Radial support for magnet base

Part No: 12-0508

Description: Can be used for supporting the magnet base in many different ways. Makes it easier to position the detector correctly. Espe-

cially useful on flywheels.

Note: -



Extension for set square 12-1087, 295 mm

Part No: 12-1123

Description: Extension plate for set

square Part. No. 12-1087.

Note: -



Extension for set square 12-1087, 430 mm

Part No: 12-1124

Description: Extension plate for set

square Part. No. 12-1087.

Note: -



Bracket (Set square) for transmitter

Part No: 12-0503 Description: -

Note: Mainly for sawmill applica-

tions.



Magnetic brackets and rods, kit

Part No: 12-1017

Description: 2 magnetic brackets and 4pcs rods 120 mm [4.72"] in

small case.
Note: -





Magnetic bracket

Part No: 12-1147

Description: For axial mounting on flanges or shafts. With M6 screws

working as radial supports, and four super magnets.

Note1: For rod C-C 40 and 56 mm.

Note2: Older design of bracket on rightmost picture.





Flange clamping bracket

Part No: 12-1373

Description: For mounting on flange edge. Maximum clamping width 27 mm [1.06"]. With locking knob, radial supports, and four super

magnets.

Note1: For rod C-C 56 mm.

PARTS Easy-Laser® Product overview





V-bracket with chain

Part No: 12-0016

Description: For mounting on shaft or coupling. The V-bracket fits shafts with diameters 20–450 mm [0.8–17.7"]. The standard chain included can be used on shaft diameters up to 150 mm [6"].

Bracket width 18 mm [0.7"].

Note: Extension chains available for shafts larger than diameter 150

mm [6"]. Does not fit the XT series.





V-bracket with chain and rods 120 mm

Part No: 12-0963

Description: For mounting on shaft or coupling. The V-bracket fits shafts with diameters 20–450 mm [0.8–17.7"]. The standard chain included can be used on shaft diameters up to 150 mm [6"]. Chain is

pre-mounted. Bracket width 18 mm [0.7"].

Note: Only for XT series. 2 pcs rods 120 mm [4.72"] included. Extension chains available [Part No. 12-1060] for shafts larger than diameter 150 mm [6"].






V-bracket with stainless steel chain and rods EX

Part No: 12-1040

Description: For mounting on shaft or coupling. The V-bracket fits shafts with diameters 20–450 mm [0.8–17.7"]. The standard chain included can be used on shaft diameters up to 150 mm [6"]. Chain is pre-mounted. Bracket width 18 mm [0.7"].

Note: Only for XT series. 2 pcs rods 120 mm [4.72"] included. Extension chains available [Part No. 12-1038] for shafts larger than diameter 150 mm [6"].



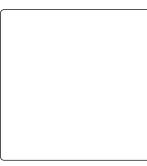

Standard chains

Part No: 12-0625

Description: Standard chains for shaft alignment brackets.

Note: 2 pcs. Includes plastic box.





Extension chain, set

Part No: 12-0128

Description: For standard chains. For shaft diameters 150–450 mm

[5.9–17.7"].

Note: 2 pcs. included, with plastic box.





Extension chain, set

Part No: 12-1060

Description: For standard chains. For shaft diameters 150–450 mm

[5.9–17.7"].

Note: 2 pcs. included, with plastic box.

PARTS Easy-Laser® Product overview





Extension chain stainless steel, set / EX

Part No: 12-1038

Description: For extension of stainless steel chains. For shaft diam-

eters 150–450 mm [5.9–17.7"].

Note: 2 pcs. included, with plastic box.





Thin chain bracket

Part No: 12-1012

Description: For use for example when the space between coupling and machine is limited. Width: 12 mm [0.5"]. For shaft diameters

20-450 mm [0.8-17.7"].

Note: Includes thin chain and tightening tool. Photos show old thread-

ings, but are otherwise correct.



Shaft bracket with chain, stainless steel

Part No: 12-0337

Description: Bracket mainly for use with the D550 system which has a rod C–C of 70 mm. Pre-mounted chain and rods. For shaft diameters 20–150 mm [0.8–5.9"].

Note: -



Extension chain, stainless steel

Part No: 12-0363

Description: For use together with 12-0337. For shaft diameters 150–320 mm [5.9–12.6"]. Two extension

chains: -500 mm [-19.6"] **Note:** 1 pc. included. Does not fit

with standard chains.





Offset bracket

Part No: 01-1165

Description: Allows axial displacement between measuring units to be able to rotate past projecting machine parts. For both E and D series. **Note:** 2 screws M6x16 also needed (Part No. 03-0045). V-bracket and

rods not included.





Offset bracket

Part No: 12-1008

Description: Allows axial displacement between measuring units to be able to rotate past projecting machine parts. Also works as a converter between rod C–C 40 mm (D and E series) and C–C 56 mm (XT series)

so older brackets can be used. **Note:** 2 screws M6x16 included.





DM Bracket, complete set

Part No: 12-1130

Description: For measuring dynamic movements. Includes 2 pcs DM brackets, 4 pcs mounting plates, 2 pcs bolt mounting plates, glue Locktite 4070, 4 pcs screw M8x20, hexagon wrench 6 mm, Quick Manual. Delivered in plastic case.

Note: -





DM Bracket

Part No: 12-1125

Description: For measuring dynamic movements. For complete set,

please see Part No. 12-1130 instead. **Note:** Measuring unit not included.





DM Bracket extension

Part No: 12-1129

Description: Extension for bracket 12-1125. For complete set, please

see Part No. 12-1130 instead.

Note: Parts included as pictured on leftmost picture.





Sliding bracket

Part No: 12-1010

Description: For shaft alignment. The spherical feet can be placed in two different positions for adaption to small or large shaft diameters.

Min./Max. diameters 90-600 mm [3.5-23.6"].

Used when the shafts cannot be rotated. Mounted with standard

chains (not included).

Note: Photos show old threadings, but are otherwise correct.





Sliding bracket with magnets

Part No: 12-0303

Description: The spherical feet can be placed in two different positions for adaption to small or large shaft diameters. With attachment magnets. Can also be mounted with standard chains (not included).

Note: -





Cardan bracket set


Part No: 12-1151

Description: For alignment of cardan/offset mounted machines. Offset

range 0-900 mm.

Note: Delivered in plastic carrying case. For XT- and E-series. Please see rightmost picture for example of attachment for E or XT unit. Weight: 8 kg [17.6 lbs], WxHxD: 500x380x140 [19.7x15.0x5.5"]



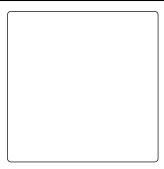

Rotational unit for wind shaft bracket

Part No: 12-1419

Description: For replacement on older wind brackets.

Note: Makes it possible to use both XT- and E-series measuring units.



Rod, 30 mm [1.18"]

Part No: 01-0938

Description: Stainless steel. Diameter 10 mm. Extendable.

Note: 1 pcs.



Rods, 60 mm [2.36"]

Part No: 12-0059

Description: Stainless steel. Diameter 10 mm. Extendable. Plastic holder included.

Note: 4 pcs.



Rods, 75 mm [2.95"]

Part No: 12-1161

Description: Stainless steel. Diameter 10 mm. Extendable. Plastic holder included.

Note: 4 pcs.



Rods, 120 mm [4.72"]

Part No: 12-0987

Description: Stainless steel. Diameter 10 mm. Extendable. Plastic holder included.

Note: 4 pcs.



Rods, 120 mm [4.72"]

Part No: 12-0324

Description: Stainless steel. Diameter 10 mm. Extendable. Plastic holder included.

Note: 8 pcs.



Rods, 240 mm [9.44"]

Part No: 12-0060

Description: Stainless steel. Diameter 10 mm. Extendable. Plastic holder included.

Note: 4 pcs.



Extension Kit for precision level for large diameters

Part No: 12-0901

Description: For using the E290 or XT290 Precision Level on diameters

55-800 mm [2.16-31.50"].

Note: Includes 2 legs, 4 magnets and mounting screws.





Slide bracket Width 25 mm [0.99"]

Part No: 12-0768

Description: Bracket for straightness measurement of bores with a width of down to 25 mm [0.99"]. For bores diam. 80– mm [3.15"–]. Magnetic feet holds the bracket safely also upside down. With positioning guide (extended on picture to the right). Guide can be removed. **Note:** Designed to fit with rod adapter 12-0767 and detectors E9/XT9. If used with other detectors and adapters, it is those which determines the minimum measurable diameter.





Rod adapter with built in target C-C 40 mm

Part No: 12-0767

Description: For detector E9 and XT9. With slidable target. For mounting of the detector on regular rods with 40 mm center-to-center distance. Can be used on Slide bracket 12-0768 or any other suitable bracket.

Note: Detector not included.





Rod adapter with built in target C-C 56 mm

Part No: 12-1351

Description: For detector E9 and XT9. With slidable target. For mounting of the detector on regular rods with 56 mm center-to-center distance. **Note:** Detector not included.



Slide bracket Small

Part No: 12-0455

Description: For bore straightness measurement. With magnetic feet.

Note: For information on measurable diameters, please see section *Technical specifications*.



Slide bracket Medium

Part No: 12-0543

Description: For bore straightness measurement. With magnetic feet.

Note: For information on measurable diameters, please see section *Technical specifications*.



Slide bracket Large

Part No: 12-0510

Description: For bore straightness measurement. With magnetic feet.

Note: For information on measurable diameters, please see section *Technical specifications*.



Small magnet base with turnable head

Part No: 12-0696

Description: With On/Off function and 360° turnable head. Removable rotation lock screw included.

Note: Includes 2 rods 75 mm

[2.95"].





Axial support for Slide bracket

Part No: 12-1368

Description: For mounting on slide brackets Small, Medium and Large. Includes 2 screws for the countersunk holes as pictured. Slide bracket not included.

Note: For information on measures, please see section *Technical specifications*.



Foot set for linebore arms

Part No: 12-0134

Description: For use with linebore detector arms. Included in 12-0314.

Note:



Foot set for diameter 120–150 mm

Part No: 12-0143

Description: For use with linebore detector 12-0032 and bracket 12-0553. Included in 12-0314.

Note: -





Detector arms Linebore

Part No: 12-0314

Description: For bracket 12-0553. For bores diameter 120–500 mm [4.72–19.68"], with the possibility to use the longest three arms as extension arms.

Note: Also includes Foot set 12-0134 and 12-0143 (the rightmost picture).





Offset hub with counterlock

Part No: 12-0661

Description: For laser transmitter D75, Part No. 12-0075.

Note: -





Offset hub with counterlock and tilt function

Part No: 12-0537

Description: For laser transmitter D25, Part No. 12-0594.

Note: -





Offset hub with counterlock and tilt function

Part No: 12-1375

Description: For laser transmitter XT24, Part No. 12-1371.

Note: -



Arm kit with magnets

Part No: 12-0707

Description: For offset hub 12-0661 and 12-0537. Arms for bores diameter 100–500 mm [3.94–19.68"].

Note: -



Offset hub arms

Part No: 12-0384

Description: For offset hub 12-0661 and 12-0537. For bores diameter 100–500 mm [3.94–19.68"]. Also

includes centering plug.

Note: -



Extension arms Linebore

Part No: 12-0282

Description: For extension of the Linebore offset hub arms. For bores diameter 500–1000 mm [19.68–

39.36"] **Note:** -



Magnets for offset hub

arms

Part No: 12-0154

Description: For arms 12-0384.

With plastic holder.

Note: -





Adjustable magnet for offset hub arms

Part No: 12-0990

Description: To use when the mounting surfaces for the hub arms aren't in same level. Adjustable 0–14mm [0–0.55"] compared to standard magnet level.

Note: -





Axial extension arms, Linebore

Part No: 12-0580

Description: Used for making it possible to reach the Linebore detec-

tor from the same side of the bore as the transmitter.

Note: 3 arms with magnets etc. as pictured on the left picture.





Laser transmitter bracket Turbine/Bore alignment


Part No: 12-0385

Description: For use with offset hub 12-0661 and laser transmitter D75. Included in system E950-B, E960-A, E960-B. 2 aluminium beams,

length 1100 mm and 500 mm.

Note: Transmitter and hub not included.



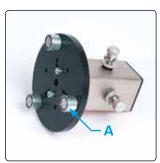

Axial bracket for laser transmitter


Part No: 12-0187

Description: To use on shaft ends, flywheels etc. Laser beam can point

from the bracket or through the bracket.

Note: A. 3 super magnets.



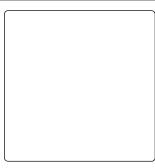


Multi bracket for XT laser transmitters

Part No: 12-1275

Description: For more mounting possibilities of the laser transmitters. **Note:** For XT20 and XT22. The set of mounting screws for XT laser-transmitter (Part No. 12-1300) might also be needed if you do not already have it. Please see the *Technical specification* pages for example

of use.



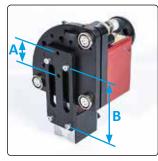

Adapter plate for tilt table to magnet base

Part No: 12-0874

Description: For mounting D22 laser transmitter on a magnet base, or a magnet base with turnable head. Possible to turn unit 90° on bracket

(mount in holes A instead).

Note: 4 screws M6x16 also needed (not included).

A: C–C=40 mm B: C–C=106 mm





Tilt table


Part No: 12-0110

Description: Tilt table mainly for transmitter D26, D22 and D23, but can also be used together with transmitter D75, for example.

Note: Tool kit 12-0622 is not included (as before) but instead has to be

ordered separately.



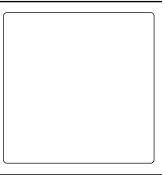

Tool kit for tilt table

Part No: 12-0622

Description: Tool kit for Tilt table Part No. 12-0110. Safety strap screw (01-1402), Machine/magnet base pin (01-0139), set of Hexagon wrenches, Rod tightening tool (03-0048), Feet with flat points (3 pcs). **Note:** Safety strap is separate part. Safety regulations differ from coun-

try to country.





Magnet base pin for D22 and D26, short

Part No: 01-0139

Description: Clamping pin diameter 16 mm[0.63"], clamping length 30

nm [1.18"].

Note: This pin is included in the tilt table tool kit.





Magnet base pin for D22/D26/XT20/XT22, Long

Part No: 01-1333

Description: Clamping pin diameter 20 mm[0.79"], clamping length 60

mm [2.36"].

Note: Also for laser transmitters XT20/XT22 when used with Multi

bracket Part No. 12-1275.





Bracket with rotatable bore probe, XT-series

Part No: 12-1277

Description: For bore measurements. Smallest diameter 220 mm [8.67"] when mounted as pictured. This is just one example of how the bracket can be assembled, and other magnetic or non-magnetic brackets with C–C 56 mm can also be used. The detector unit can be turned, allowing the laser beam to pass through the hole in the bracket and hit the PSD. Includes 2 rods 30 mm and 4 rods 60 mm (not pictured).

Note: Items marked with X is *not* included.





Bracket with rotatable bore probe, E-series

Part No: 12-1282

Description: For bore measurements. Smallest diameter 170 mm [6.70"] when mounted as pictured. This is just one example of how the bracket can be assembled, and other magnetic or non-magnetic brackets with C–C 40 mm can also be used. The detector unit can be turned, allowing the laser beam to pass through the hole in the bracket and hit the PSD. Includes 2 rods 30 mm and 4 rods 60 mm (not pictured).

Note: Items marked with X is *not* included.





Self centering bracket, Linebore

Part No: 12-0341

Description: For sterntube measurement. Smallest diameter 300 mm [11.81"]. Includes extension beams and rods for diameters up to 1200 mm [47.24"].

Note: Includes items as pictured leftmost. No detector included.






Detector bracket "short stroke", Turbine

Part No: 12-0438

Description: With slidable beam. Makes it possible to reach several measurement positions without moving the entire bracket. One aluminium beam 1100 and one 600 mm included. For diameter 150–1700mm [5.9–66.9"].

Note: Detector not included.



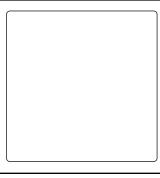

Detector bracket "long stroke", Turbine

Part No: 12-0715

Description: Measures diameters 200-1700 mm [7.8-67"] as stan-

dard. Stroke: 60 mm [2.36"].

Two aluminium beams 1100 mm [43.3"], one 600 mm [23.6"], rods 5x240 mm [9.44"], 4x120 mm [4.72"], 2x60 mm [2.36"], 1x30 mm [1.18"] included. For diameter 200–1700mm [7.8–66.9"].

Note: Detector not included.





Tube bracket

Part No: 12-0814

Description: Included with Part No. 12-0438 and 12-0715.

Note: -



Aluminium beam, 500 mm [19.68"]

Part No: 03-0769

Description: Cross section measures 44x44 mm [1.73x1.73"].

Note: -



Aluminium beam, 600 mm [23.62"]

Part No: 03-0770

Description: Cross section

measures 44x44 mm [1.73x1.73"].

Note: -



Aluminium beam, 1100 mm [43.31"]

Part No: 03-0771

Description: Cross section measures 44x44 mm [1.73x1.73"].

Note: -



Connecting strip (with set screws)

Part No: 03-0633

Description: Used to extend the

aluminium beams.

Note: 1 pc. It is recommended to use minimum three connecting

strips (three sides).



Ball top probe

Part No: 12-0439

Description: Probe for turbine

measurement.

Note: -



Short ball top probe

Part No: 12-0490

Description: Probe for turbine

measurement.

Note: -



Measuring probe Ruby diameter 5 mm

Part No: 12-0805

Description: Probe for turbine measurement. With ruby top.

Note: -



Measuring probe Ruby diameter 2.5 mm

Part No: 12-0801

Description: Probe for turbine measurement. With ruby top.

Note: -



Gauge block

Part No: 03-1291

Description: For use mainly in turbine applications. Nominal measure 8 mm [size of block 30x8x9 mm].

Note: -



Measuring probe, cylindrical

Part No: 12-1047

Description: For use in turbine

applications.

Note: -

DE



Centering target, Turbine

Part No: 12-0443

Description: For rough alignment of laser beam. 1 m + 0.5 m exten-

sion. Note: -





Tripod

Part No: 12-0269

Description: For use with Laser transmitter and Angular prism.

Min./Max. height 500-2730 mm [19.7-107.5"]

Note: Includes tripod head Part No. 03-1338, with 5/8-11 UNC

threads.





Parallelity kit

Part No: 12-0203

Description: For parallelism measurement of rolls. Includes Magnet base 12-0045, Sliding bracket 12-0137, Sliding table 12-0202, 2 x Large

target base line. Delivered in plastic case.

Note: Detector not included.





Sliding table for tripod

Part No: 12-0202

Description: Sliding table to mount on a tripod. For laser transmitters

and angular prism. Mounted using 5/8-11 UNC thread.

Allows for 150 mm [5.9"] slide of the unit, for example to point the laser beam to a detector on a rod or flange without moving the tripod. **Note:** Also for laser transmitters XT20/XT22 when used with Multi

bracket Part No. 12-1275.





Angular prism Mk2

Part No: 12-1352

Description: Angular prism with built-in penta prism which deflects the beam 90°. With the rotatable angular prism you can reach a detector at any height on a flange or a roll when measuring parallelity. With fine turning mechanism.

Note: Includes prism and bracket for mounting a detector/measuring unit at the front, as pictured to the right. Angular prism rod C–C 40 mm. Bracket for detector rod C–C 40 mm and 56 mm.





Angular prism Mk2, kit for XT-series

Part No: 12-1376

Description: Angular prism kit in rugged carrying case.

Note: Carrying case plus items as pictured leftmost included (prism, bracket for detector unit, XT22 laser transmitter alignment target (12-1379), magnet base, sliding table for magnet base, 4 pcs rods 120 mm [4.72"]), Quick Guide. Interior precut to also fit 1 pc 12-0202 (accessory). Case measures WxHxD: 375x300x180 [14.7x11.8x7.1"], kit

weight 5.0 kg [11.0 lbs].





Target for XT22

Part No: 12-1379

Description: Target to place on laser transmitter XT22 when pre-align-

ing the Angular Prism Mk2.

Note: Included as standard with 12-1376.





Tripod adaptor for Angular prism

Part No: 01-2232

Description: To be used for mounting of Angular prism on tripod. Preferably on sliding table 12, 0202 as pictured.

erably on sliding table 12-0202 as pictured.

Note: Item as pictured leftmost included. Can be used for other applications if suitable. Rod C–C 40 and 56 mm. Note that rightmost picture

shows old design of prism.





Sliding table for magnet base

Part No: 12-1200

Description: For precision adjustment, mainly of angular prism. For

rod C–C 40 mm. To be mounted on magnet base 12-0013. **Note:** Includes 4 pcs screws. Magnet base not included.





Target 100x100 mm

Part No: 12-0544

Description: Rough alignment target for flatness measurement. Adjustable height (to align with either D22 or D23) and magnet base.





Target E-series 20 x 20

Part No: 12-0794

Description: Rough alignment target for measuring units ES/EM, detectors E4, E5 and E7. Can be mounted to cover laser opening, functioning as dust cover and protection. With reflective centre point. Note: Only one target included per Part No., i.e. if you order targets

for a pair of measuring units, you will need two 12-0794.





Large target extruder

Part No: 12-0810

Description: Transparent target with adjustable magnets for mounting

on tube end. Splits in two, to fit in the transportation case.

Note: A=Min.-Max. diameter 45-200 mm [1.77-7.87"] approximately.

Target diameter 200 mm [7.87"]






Target cardan

Part No: 12-0139

Description: Large target for use when aligning cardan/offset mounted machines. The target clamps onto the front of the D-series measuring units.

Note: -



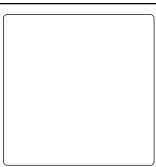

Wireless unit (Version 1)

Part No: 12-0436

Description: Unit for wireless communication. No internal battery.

Note: For all E-series units: Part No. 12-0702, 12-0752, 12-0434, 12-

0433, 12-0789, 12-0790 and 12-0824.





Splitter cable B, for charging

Part No: 12-0725

Description: To connect two Easy-Laser® units when charging.

Note: Only for charging, the cable cannot be used to transfer any mea-

surement data. Not for use with 12-0738.





Splitter cable A, for charging two 12-0738

Part No: 12-0728

Description: For charging two wireless units with battery, Part No.

12-0738.

Note: Only for charging 12-0738, the cable cannot be used to transfer

any measurement data.





DC to USB adapter

Part No: 12-0751

Description: Adaptor to be used with cable 12-0989 and 12-0750.

Note: Cannot transfer any measurement data.



DC split cable for charging

Part No: 12-0989

Description: Cable for charging the units of system E420, E540 and XT440, XT550, XT660, XT770,

XT980.

Note: This cable cannot transfer

any measurement data.



"Red cable", 2.0 m [78.7"]

Part No: 12-0074

Description: For connecting Easy-Laser® measurement equipment. With Push-Pull connectors.

Note: -



"Red cable", extension, 5.0 m [16.4']

Part No: 12-0108

Description: For connecting Easy-Laser® measurement equipment. With Push-Pull connectors. **Note:** Extension cable.



"Red cable", extension, 10.0 m [32.8']

Part No: 12-0180

Description: For connecting Easy-Laser® measurement equipment. With Push-Pull connectors.

Note: Extension cable.



Cable support

Part No: 12-0321

Description: If the cable is accidentially pulled with great force, this support will prevent the connector from damage. It will also minimise the risk of moving the detector out of position.

Note: -



Printer cable

Part No: 03-0241

Description: For connection of the thermal printers 03-0341 and 03-0032 to display unit D279.

Note: -



Charger for E-series display unit

Part No: 03-1243 Description: -

Note: Wall socket connection cable (charger cable) also needed, choose part depending on country of use.



Charger for XT-series*

Part No: 03-1256

Description: -

Note: *Not for system XT550 or XT50 units. Wall socket connection cable also needed, choose part depending on country of use.



Charger for XT550 and XT50 units / EX

Part No: 12-1281 Description: -

Note: Wall socket connection cable (charger cable) also needed, choose part depending on country of use.



Charger cable, EUR

Part No: 03-0892 Description: -

Note: Charger unit also needed.



Charger cable, USA

Part No: 03-0893 Description: -

Note: Charger unit also needed.



Charger cable, UK

Part No: 03-0894 Description: -

Note: Charger unit also needed.



Charger cable, AUS

Part No: 03-0895 Description: -

Note: Charger unit also needed.



HDMI to **HDMI** cable

Part No: 03-0901 Description: Length 3 m.

Note: -



Printer for E-series

Part No: 03-1004

Description: Battery operated thermal printer. With USB cable and 110–220V charger. For connection to all systems with E-series display units. Wall socket connection cable also needed, choose part depend-

ing on country of use.

Note: 1 paper roll included. Spare rolls, Part No. 03-0041.



VGA/HDMI kit, for serial number 94177 and newer


Part No: 12-0840

Description: Makes it possible to show the display unit screen on a TV or projector. Includes cable 03-0901 (HDMI), cable 03-0902 (VGA),

converter and VGA circuit board.

Note: Only for Display unit 12-0418 (E51) with serial number 94177 and higher. The VGA kit (the circuit board) must be ordered at system purchase for factory installation, it cannot be mounted afterwards.



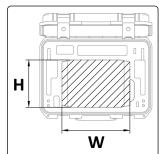

Carrying case Medium for XT440/XT660/XT770

Part No: 12-0973


Description: Carrying case with pre-shaped interior for system XT440,

XT660 and XT770.

Note: The interior has space for display unit XT12. If other display unit is to be placed in the case, please note the shape and dimension of the cutout (picture to the left). W=266 mm [10.4"], H= 195 mm [7.6"].

Note 2: No system name sticker is included if not asked for.



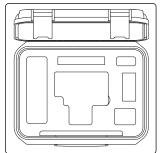


Carrying case for XT laser transmitters

Part No: 12-1290

Description: Carrying case with pre-shaped interior for laser transmit-

ter XT20 or XT22, plus associated accessories.

Note: No system name sticker is included if not asked for.

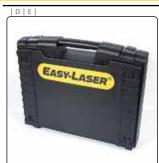

Transportation case

Part No: 12-0237
Description: Note: Uncut foam.



Transportation case

Part No: 03-0909

Description: Rigid case for D22 or D23, or other accessories of your

choice.

Note: The foam is cut to order. Specify what the case will be used for. Otherwise it will be delivered

with foam uncut.





Transportation case for system E180 and XT190

Part No: 12-0804

Description: Carrying case with interior for belt alignment units. **Note:** No system name sticker is included if not asked for.



Plastic case for small items

Part No: 03-0792

Description: Transportation case

with foam interior.

Note: This is the standard case included with Easy-Laser systems.



Protective case for display unit E51, E52 and

E53

Part No: 01-1379

Description: With strap.

Note: -



Shoulder strap for display unit E-series

Part No: 12-0495 Description: -Note: -



Shoulder strap for display unit XT-series

Part No: 12-0997 Description: -Note: -



Safety strap

Part No: 03-1406

Description: Bahco 3875-LY2, for 3 kg [6.6 lbs] weight. For use with laser transmitter D22/D23/XT20/XT22 and Digital Levels E290 and

Note: Screw 01-1402 for fastening the strap might also be needed.



Screw for safety strap

Part No: 01-1402

Description: For fastening the safety strap Part No. 03-1406

Note: -



Hexagon wrench set

Part No: 03-0967

Description: Hexagon wrench set with dimensions 1.27, 1.5, 2, 2.5, 3, 4.5 and 6 mm. Ball end.

Note: -



Measuring tape, 5 m [16.4']

Part No: 03-1707 Description: -Note: -





Demo unit Shaft

Part No: 12-0416

Description: For shaft alignment training. Can simulate both coupled

and uncoupled shafts. With two shims 1.00 mm included. Dimensions: appr. 400x200x200 mm [15.7x7.8x7.8"].

Note: To simulate an actual alignment, shims (Type A) of different thicknesses can be used. Measuring units and brackets not included.





Demo unit Shaft, steel

Part No: 03-1332

Description: For shaft alignment training. Can simulate both coupled and uncoupled shafts. Two units or more can be connected in series to simulate machine train. With two shims 1.00 mm included. Dimensions: WxHxD appr. 640x275x255 mm [25.2x10.8x10.0"]. **Note:** To simulate an actual alignment, shims (Type A) of different thicknesses can be used. Measuring units and brackets not included.





Demo unit Sheave

Part No: 12-0236

Description: Can be placed standing or lying down.

WxHxD: 660x200x100 mm. Weight: 8 kg. **Note:** BTA and targets not included.





Stinger for XT280

Part No: 03-1326

Description: Accessory probe for the XT280 Vibrometer.

Note: Length 100 mm.





Accelerometer magnet for XT280

Part No: 03-1327

Description: Accessory probe for the XT280 Vibrometer.

Note: -





XT Laser transmitter upgrade Kits for older XT770 systems (two versions)

Part No: 12-1320 (with XT20) or 12-1321 (with XT22).

Description: Includes laser transmitter as indicated above, plus 12-1418 Medium Case GEO with wheels, 12-1275 Multi bracket, 12-1300 Mounting screws for XT transmitter, 12-1133 Magnet base with turnable head, 01-0873 4 pcs Rods 120 mm, 03-1256 Charger, 12-0751 DC to USB Adapter, 12-0989 DC split cable, 03-0967 Hexagon wrench, 03-0878 Cleaning cloth, 05-0993 Quick Guide.



Top for D23

Part No: 01-0618 + 03-0505

Description: For protection of the

rotating head.

Note: Top and screw are separate

articles.



Target for BTA, 18 mm

Part No: 12-0394

Description: Suitable for laser transmitter 12-0309, 12-0390, and

12-1325. **Note:** 1 pc.





V-bracket

Part No: 12-0130

Description: For mounting on shaft

or coupling

Note: Just bracket, no chain.



Screw M6x14

Part No: 03-0061 Description: -

Note: -



Rod tightening tool,

4 mm

Part No: 01-0048 Description: -

Note: -



Locking screw

Part No: 01-0039

Description: Fits measuring units; 12-0001, 12-0002, 12-0119, 12-0120, 12-0114, 12-0116, 12-0776, 12-0777, 12-0698, 12-0697, 12-0746, 12-0747. Detectors; 12-0005,

12-0201, 12-0255.

Note: -



Locking screw

Part No: 01-1953

Description: Fits measuring units; 12-0434, 12-0433. Detectors; 12-0702, 12-0509, 12-0752.

Note: -



Locking screw

Part No: 01-1866

Description: Fits measuring units; 12-0943, 12-0944, 12-1028, 12-1029, 12-1026, 12-1027, 12-1045,

12-1046. **Note:** -



Spare locks for carrying cases

Part No: -

Description: Spare locks for different models of Easy-Laser® carrying

cases.

Note: Ask us for more details on pricing and availability. *Always measure width before ordering!*



Padded case for BTA

Part No: 03-0591

Description: Padded case with belt

strap.
Note: -




Cleaning cloth

Part No: 03-0878

Description: For cleaning of optical surfaces such as laser aperture and PSD window.

Note: -

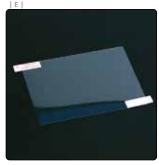


LCD display protection film for E51/E52/E53

Part No: 03-0972

Description: Thin film for scratch protection of the LCD display.

Note: -

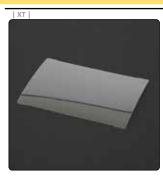

LCD display protection film for XT11

Part No: 01-1945

Description: Thin film for scratch protection of the LCD display.

Note: -



Thermo paper roll

Part No: 03-0041

Description: Paper roll for printer

03-0032 and 03-0341.

Note: -



Vapor capsule Zerust VC2-2

Part No: 03-1184

Description: Protects metals against rust and corrosion. Estimat-

ed life span 2 years.

Note: For use in system cases. With

adhesive backing.



Sticker "This machine is aligned with"

Part No: 04-0053

Description: To stick on aligned machines. With writable surface for date and operator signature.

Note: 25 stickers.



QR code sticker

Part No: 04-0307

Description: To stick on machines. Read it from within the XT app for easy access to machine data etc.

Note: 10 stickers with unique

numbers.



Laser target sticker


Part No: 04-0146

Description: To be used as reference point when doing geometrical measurements. Red reflectice cross

for higher visibility.

Note: Size 35x35 mm [1.38x1.38"]



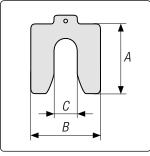

Shims case 1, 180 shims

Part No: 12-0258


Description: 180 shims, 10 pcs of each shim included. Weight 3.9 kg.

Shims type 1, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm. Shims type 2, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm. Shims type 3, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm.

Note: Shims type 1, A: 55 mm, B: 50 mm, C: 15 mm

Shims type 2, A: 75 mm, B: 70 mm, C: 23 mm Shims type 3, A: 90 mm, B: 80 mm, C: 32 mm



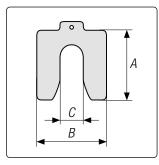

Shims case 2, 360 shims

Part No: 12-0259


Description: 360 shims, 20 pcs of each shim included. Weight 6.1 kg.

Shims type 1, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm. Shims type 2, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm. Shims type 3, thickness 0.05, 0.10, 0.20, 0.50, 0.70, 1.00 mm.

Note: Shims type 1, A: 55 mm, B: 50 mm, C: 15 mm

Shims type 2, A: 75 mm, B: 70 mm, C: 23 mm Shims type 3, A: 90 mm, B: 80 mm, C: 32 mm



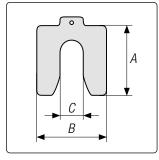

Shims case 3, shims of your choice


Part No: 12-0743

Description: For this case you choose number of shims yourself, from type 1, 2, 3, 4. Thickness 0.05–1.00 mm 10pcs/pack, 2.00 mm 5pcs/pack, 3.00 mm 2pcs/pack. Weight, case without shims 3.2 kg.

Note: Shims type 1, A: 55 mm, B: 50 mm, C: 15 mm

Shims type 2, A: 75 mm, B: 70 mm, C: 23 mm Shims type 3, A: 90 mm, B: 80 mm, C: 32 mm Shims type 4, A: 125 mm, B: 105 mm, C: 44 mm



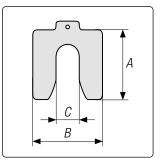

Shims

Part No: See price list.

Description: Blister packs. Thickness 0.05–1.00 mm delivered 10pcs/

pack, 2.00 mm 5pcs/pack, and 3.00 mm 2pcs/pack.
Type 1, thickness [mm] 0.05, 0.10, 0.20, 0.40, 0.50, 0.70, 1.00, 2.00, 3.00.
Type 2, thickness [mm] 0.05, 0.10, 0.20, 0.40, 0.50, 0.70, 1.00, 2.00, 3.00.
Type 3, thickness [mm] 0.05, 0.10, 0.20, 0.40, 0.50, 0.70, 1.00, 2.00, 3.00.
Type 4, thickness [mm] 0.05, 0.10, 0.20, 0.40, 0.50, 0.70, 1.00, 2.00, 3.00.

Type 5, thickness [mm] 0.05, 0.10, 0.20, 0.40, 0.50, 0.70, 0.80, 1.00, 2.00, 3.00. **Dimensions [mm]:** Type 1, A: 55, B: 50, C: 15. Type 2, A: 75, B: 70, C: 23. Shims type 3, A: 90,

B: 80, C: 32. Type 4, A: 125, B: 105, C: 44. Type 5, A: 200, B: 200, C: 85.



Tripod head

Part No: 03-1338

Description: For use on tripod 12-0269 with e.g. D22 and Angular

prism. **Note:** -



Extruder cardan joint

Part No: 12-1279

Description: For the extruder

bracket.
Note: -



Extruder rod handle

Part No: 12-1280

Description: For the extruder

bracket. **Note:** -



Velcro clip with pin

Part No: 01-1703

Description: For the extruder

bracket. **Note:** -



Charger for E-series printer

Part No: 03-1459

Description: Replacement charger

for printer Seiko DPU-S445.

Note: Wall socket connection cable (charger cable) also needed, choose part depending on country of use.



Mounting screws for XT laser transmitters

Part No: 12-1300

Description: Screws for mounting the unit on different brackets. **Note:** Rod tightening tool, Screw for safety strap, 6 pcs M6x16 mm MC6S, 8 pcs M6x20 mm MC6S, 4 pcs Set screw 6x8 mm. In plastic box.



Extruder extension rods

Part No: 12-1422 Description: -Note: -



Cap

Part No: 13-0004

Description: Cap made of 100% cotton. Easy-Laser® embroidery on front. With strap for size adjust-

ment.

Note: Not always in stock. Price

upon request.



USB memory

Part No: 03-0914

Description: 4 GB memory stick USB. Easy-Laser® logo engraved on

one side as on picture. **Note:** Price upon request.



Pen

Part No: 13-0006

Description: With blue ink. Easy-Laser® logo as pictured. Good

quality pen.

Note: Not always in stock. Price

upon request.



Key holder

Part No: 01-1095

Description: With snap-hook and

string for mobile phone.

Note: Not always in stock. Price

upon request.



Logo sticker

Part No: 04-0125 (small), 04-0124

(large

Description: Durable sticker with strong adhesive. Same sticker as on the system cases. Available in two sizes: 200x44 mm [7.87x1.73"] and

305x67 mm [12.01x2.64"]. **Note:** Price upon request.



Keychain with spirit level

Part No: 13-0013

Description: Keychain with spirit level (plastic block 40x15x15 mm). Easy-Laser® logo as pictured. For give-away purpose/not calibrated. **Note:** Not always in stock. Price

upon request.





Playing cards

Part No: 13-0007

Description: Deck of cards. International symbols. Easy-Laser® logo and web address "www.easylaser.com" printed as on picture.

Note: Not always in stock. Price upon request.





Notebook for the technician

Part No: 05-0792

Description: Notebook measuring 90x140 mm that fits easily into a pocket in your work clothes, with an insert comprising 38 pages of graph paper and conversion tables on the inside of the cover. Laser

facts on back cover.

Note: Not always in stock. Price upon request.

EASY-LASER®

TECHNICAL SPECIFICATIONS

READ THIS INFORMATION CAREFULLY:

Crucial software and electronics updates

The unit for wireless communication has been available in two versions. The only model available now is Part No. 12-0436. It supports all units mentioned below without limitations. For a period between November 2022 and September 2023 there was a model with Part No. 12-1336, which had a UKCA (UK Conformity Assessed) marking on the label (see image to the right).

These units for wireless communication are used with detectors and measuring units in the E-series, namely 12-0509 (E5)/12-0702 (E4)/12-0752 (E7)/12-0434 (EM)/12-0433 (ES)/12-0790 (EMH)/ 12-0789 (ESH), 12-0824 (E7H).

Note! Wireless unit 12-1336 only works with above mentioned detectors and measuring units which also have the UKCA mark, except for the 12-0509 (E5) detector with which 12-1336 is compatible in any case.

- As of November 2022, the XT alignment app no longer supports the XT11 rev 1 Display unit (serial number 129231 or lower).
 - XT alignment app version 8.1 and higher will not be compatible with XT11 rev 1.
- XT measuring units produced in November 2022 or later will not be compatible with the XT11 rev 1 Display unit (serial number 129231 or lower). If you want to purchase new measuring units and are currently using an XT11 rev 1 Display unit, please contact your local distributor for advice before placing an order.
- To be able to connect/pair an XT app with the Easy-Laser PLUS™, XT app version 9.0 or higher is required.







Compatibility between D, E and XT

Easy-Laser® measurement systems are extremely versatile in their standard form. By using clever accessories, you can adapt the systems for your own needs, now and in the future as your measurement requirements change. You can also combine parts from one system with another. This is cost-effective! However, there are some differences you need to know:

- The D-series, E-series and XT-series detectors and display units can only be used within its own product series. Note! One exception is the sheave alignment detector 12-1054, which can be connected to XT12, XT11, E51 and E52.
- The XT20/22 laser transmitters requires use of the XT Alignment app for calibration.
- Brackets for D- and E-series has a rod C-C of 40 mm, XT-series rod C-C is 56 mm. The XT offset bracket (12-1008) function as an adaptor for these two measures, but doesn't fit all older brackets.

Software communication








Brackets





Explanation of technical drawings and data

- On the following pages technical specifications for the most common units can be found. We will not list all products here.
- You should always also read the complete product description to find out about compatibility with other Easy-Laser® products.
- Please note that the measurement range for laser transmitters is the maximum range, and in reality depends on the detector used and the application.
- Operating times also depends on the actual application, therefore it is not specified for all products. See system specifications in each brochure for more detailed information. Li-Ion battery condition also affect the operating time.
- The drawings show the most important measures. Because of limited space we cannot always place the projections according to Europen drawing projection, but that is otherwise the method used.
- Specifications are quoted to 95% confidence level (coverage factor k=2).

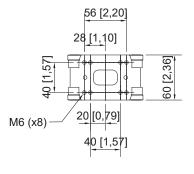

Specifications for built-in rechargeable batteries (2024-10-31):

Easy-Laser Part No.	MSDS Document	Туре	Nominal Voltage	Nominal Capacity	Energy	Included in
12-1100*	Α	Li-lon	3.65 V	11400 mAh	41.61 Wh	12-0418 Display unit E51
12-1382*	Α	Li-lon	3.6 V	11200 mAh	40.32 Wh	12-0700 Display unit E52
						12-0748 Display unit E53
03-0765	В	Li-lon	3.7 V	660 mAh	2.5 Wh	12-0433 Measuring unit S 20x20
						12-0434 Measuring unit M 20x20
						12-0509 Detector E5
						12-0752 Detector E7
						12-0759 Detector E9
						12-0789 Measuring unit ESH 20x20
						12-0790 Measuring unit EMH 20x20
						12-0799 Detector E3
						12-0824 Detector E7H
		1				12-0846 Precision level E290
						12-1350 Detector XT9 (2 pcs)
						12-1371 Laser transmitter XT24
03-1052	С	Li-lon	3.7 V	330 mAh	1.22 Wh	12-0746 Measuring unit ELM 20
						12-0747 Measuring unit ELS 20
		İ		İ		12-0776 Measuring unit ELM 40
						12-0777 Measuring unit ELS 40
						12-1054 Detector BTA XT190
03-0971	D	Li-lon	3.6 V	2600 mAh	9.36 Wh	12-0618 Battery pack wireless
						12-0823 Laser transmitter E30
						12-0845 Detector E2
12-0953	F	Li-lon	3.7 V	2000 mAh	7.4 Wh	12-0943 Measuring unit XT40-M
						12-0944 Measuring unit XT40-S
						12-1028 Measuring unit XT60-M
						12-1029 Measuring unit XT60-S
						12-1045 Measuring unit XT70-M
						12-1046 Measuring unit XT70-S
						12-1241 Precision level XT290
12-1301	F	Li-lon	7.4 V	2000 mAh	2x7.4 Wh	12-1272 Laser transmitter XT20
(2 x 12-0953)		İ				12-1273 Laser transmitter XT22
12-1307	К	Li-lon	3.7 V	1960 mAh	7.25 Wh	12-1026 Measuring unit XT50-M
						12-1027 Measuring unit XT50-S
N/A	Н	Li-lon	3.8 V	4450 mAh	16.91 Wh	12-1196 Ecom Tablet for XT550
						12-1086 Ecom Tablet for XT550
N/A	L	Li-lon	3.85 V	4900 mAh	18.87 Wh	12-1327 Ecom Tablet for XT550
12-1099	I	Li-lon	7.3 V	5700 mAh	41.64 Wh	12-0961 Display unit XT11 (2 pcs)
12-1328	J	Li-lon	3.6 V	18900 mAh	68.04 Wh	12-1291/12-1292 Display unit XT12



*Check label on unit to find out which one is used.

Information about chargers

Part No. 03-1243, Charger for E-series

Model: GPE024P-120200-D

AC Input: 100–240 V AC ~0,75 A, 50–60 Hz DC Output: 12.0 V DC 2.0 A, 24.0 W

 $Efficiency: \geq 86.2\% \ (avg.) \ at \ 115 Vac/60 Hz \ or \ 230 Vac/50 Hz \ input \ voltage \ and \ 10\%, \ 25\%, \ 50\%, \ 75\% \ or \ 100\% \ of \ max \ output \ current.$

≤0.1 W at no load power consumption, at normal line input.

Part No. 12-1281, Charger for XT50/XT550

Model: GPE024P-120200-D

AC Input: 100–240 V AC ~0,75 A, 50–60 Hz DC Output: 12.0 V DC 2.0 A, 24.0 W

Efficiency: ≥86.2% (avg.) at 115Vac/60Hz or 230Vac/50Hz input voltage and 10%, 25%, 50%, 75% or 100% of max output current.

≤0.1 W at no load power consumption, at normal line input.

Part No. 03-1256, Charger for XT-series

Model: EA10682N-150

AC Input: 100–240 V AC ~2.0 A, 50–60 Hz DC Output: 15.0 V DC 4.0 A, 60.0 W

Efficiency: ≥89.0% (avg.) at 115Vac/60Hz or 230Vac/50Hz input voltage and 25%, 50%, 75% or 100% of max output current.


≥79.0% at 115Vac/60Hz or 230Vac/50Hz input voltage and 10% of max output current.


≤0.15W at no load power consumption, at normal line input.


Display unit XT12, Part No. 12-1291 / 12-1292

mm [inch]

CE					
Type of display/size	8" LCD capacitive multi-touch colour display				
Battery type	Heavy duty Li Ion rechargeable				
Operating time	Up to16 h continuously				
Connections	USB A, USB C, Charger, AV (HDMI)				
Communication	Wireless technology, WiFi				
Camera, with LED diode	13 Mp autofocus				
IR camera (Only in model 12-1292)	FLIR LEPTON® 0-400 °C [32-752 °F]				
Help functions	Built-in manual				
Environmental protection	IP66/67, designed for outdoor use (pollution degree 4)				
Operating temperature	-10-50 °C [14-122 °F]				
Storage temperature	-20-50 °C [-4-122 °F]				
Relative humidity	10–95%				
Loudspeakers	Built-in, rear-facing				
Charger	15 V				
Housing material	PC/TPE or PC/TPU				
Dimensions	WxHxD: 269.0x190.0x49.4 mm [10.59x7.48x1.95"]				
Weight	1400 g [49.4 oz]				

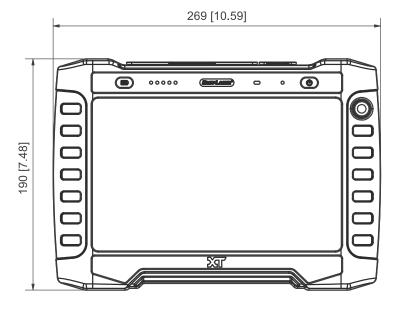



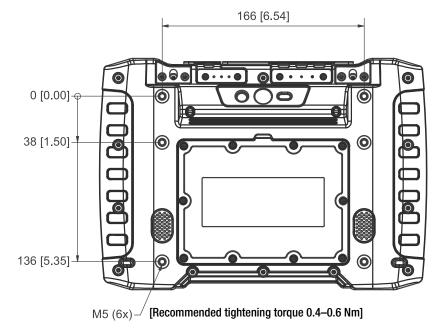





XT290 Digital Precision Level, Part No. 12-1241

Displayed resolution 0.1, 0.01, 0.001 mm/m [mils/inch] 0.001, 0.0001, 0.00001 inch/foot 10, 1, 0.1 arcsec 0.01, 0.001, 0.0001 degree Precision level range ±20 mm/m [±20 mils/inch] (pitch) ±0.02 mm/m ±1% [±0.02 mils/inch ±1%] Precision level accuracy 0.001 mm/m [0.001 mils/inch] Precision level sensitivity Inclinometer range ±180° (pitch and roll) ±0.2° (within range ±5°), ±1° (within range ±180°) Inclinometer accuracy TFT 240x240 pixels, RGB colour Type of display Communication BT wireless technology, 20 m [65'] range **Environmental protection** IP Class 66/67 Warning sensors Temperature change and vibration Operating temperature -10-50 °C [14-122 °F] -20-50 °C [-4-122 °F] Storage temperature Operating time Up to 20 h continuously Internal battery Material Corrosion resistant hardened steel, PC/ABS plastics WxHxD: 149x37.3x47.1 mm [5.86"x1.47"1.85"] Dimensions Weight 548 g [19.3 oz]

mm [inch]

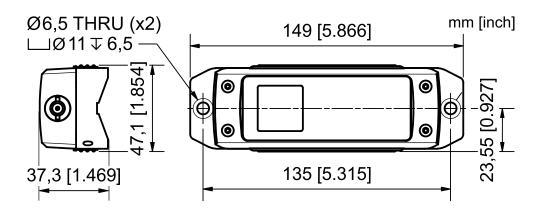

Extension kit for Precision Level, Part No. 12-0901

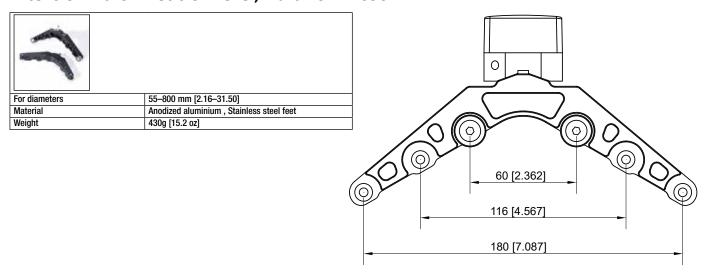



Wireless unit, Part No. 12-0436



Wireless unit Version 1, Part No. 12-0436

Communication	BT wireless technology
Operating temperature	-10–50 °C [14–122 °F]
Environmental protection	IP class 66 and 67
Housing material	ABS
Dimensions	WxHxD: 53x32x24 mm [2.1x1.2x0.9"]
Weight	25 g [0.9 oz]

XT280 Vibrometer, Part No. 12-1090



Vibrometer probe X1280, Part No. 12-1090 (system)		
Frequency range	2 Hz to 1kHz (ISO) 1 kHz to 10 kHz (BDU)	
Max frequency resolution	1.25 Hz @ 800 lines FFT setting	
Displayed amplitude units	Acceleration in g	
	Velocity in mm/s (or inch/s)	
	Bearing noise in BDU (bearing damage units)	
Displayed Frequency Units	Hertz (Hz), RPM or CPM	
Input range	User selectable with accelerometer sensitivity	
Dynamic range	96 dB (0.01g resolution)	
VA diagnostic bands		
(RPM=run speed)	Unbalance 1x RPM	
	Alignment 2x RPM	
	Looseness 3x RPM	
Operating temperature	0°C to 50°C [32–122 °F]	
Storage temperature	-20–70 °C [-4–158 °F]	
Battery type	2 x AA batteries	
Battery operation	20 hours continuously (depending on brightness setting)	
Environmental protection	IP67	
Material	ABS plastics / Hard anodized aluminium	
Dimensions	WxHxD: 200 mm x 60mm x 26mm [7.8 x 2.4 x 1.0"]	
Weight	280 g [9.8 oz]	


Weight


Laser transmitter XT24, Part No. 12-1371


C€	LASER 2		
Type of laser	Fiber-coupled diode laser		
Laser wavelength	630-680 nm, visible red light		
Laser Safety Class	Class 2		
Output power	< 0.6 mW		
Beam diameter	6 mm [1/4"] at aperture, 13 mm [0.51"] at 40 m [132']		
Working distance	40 m [132']		
Type of battery	Heavy duty Li-lon rechargeable		
Operating time/battery	Up to 24 hours continuous use		
Warmup time	15 min.		
Operating temperature	-10–50 °C [14–122 °F]		
Storage temperature	-20-50 °C [-4-122 °F]		
Relative humidity	10–95% non-condensing		
Straightness of laser beam	±0.001 mm (after best fit operation)		
	[±0.040 mils] (after best fit operation)		
Laser adjustment on hub	Angle: 2 ways ±1.3° (± 23 mm/m)		
	Offset: ±5 mm in two axes		
Environmental protection	IP66/67, designed for outdoor use (pollution deg. 4)		
Housing material	Anodized aluminium		
Dimensions	WxHxD: 69x49.5x107 mm [2.7x2.0x4.2"]		


520 g [1.19 oz]

mm [inch]

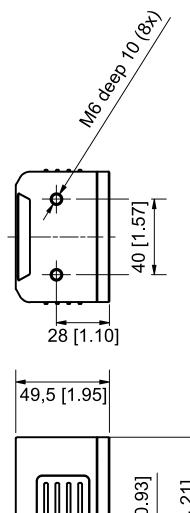

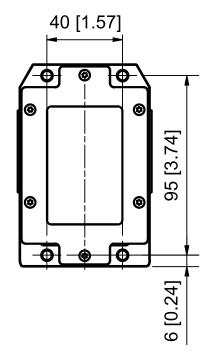

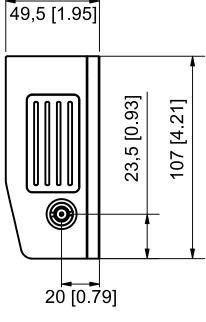

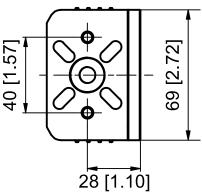






Laser transmitter XT20, Part No. 12-1272



mm [inch]

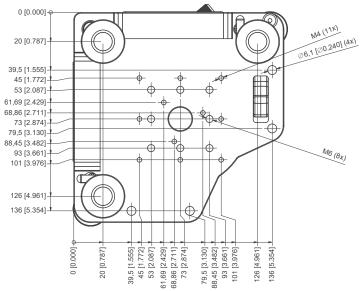

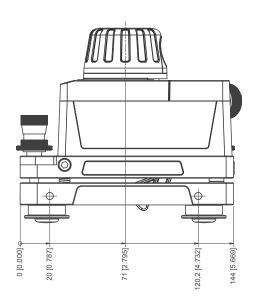

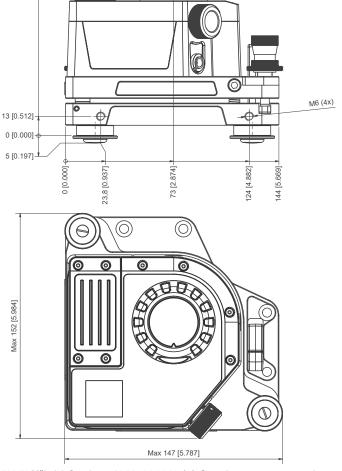




Easy-Laser® is manufactured by Easy-Laser AB, Alfagatan 6, 431 49 Mölndal, Sweden, +46 31 708 63 00, info@easylaser.com, www.easylaser.com © Easy-Laser AB. We reserve the right to make modifications without prior notification. Easy-Laser® is a registered trademark of Easy-Laser AB.


126,25 [4.970] 110,47 [4.349]


Laser transmitter XT22, Part No. 12-1273



mm [inch]

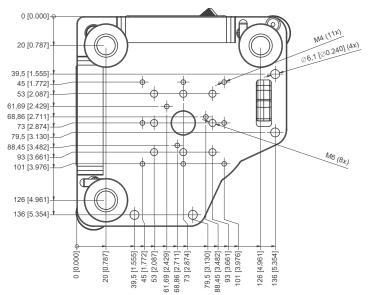

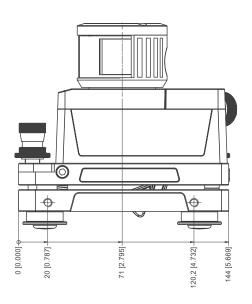

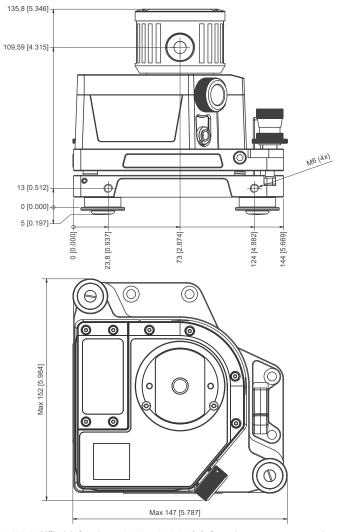



Mounting possibilities for XT20/XT22 and Multi-bracket





A/B: Use the Multi-bracket as adapter for mounting on tripod, vertically or horizontally. **C:** Use it to mount the transmitter vertically on a magnet base.


D: The three super magnets can be mounted at many different positions, making it possible to also place the transmitter on a small surface, when needed. Here are three examples shown.


E: Use rods on regular magnet bases to position the transmitter at required height. For example when you need to place the transmitter on a lower position than the surface to be measured.


F: Mount one or two magnet bases directly on the tilt table.

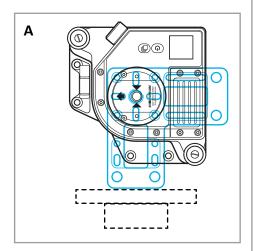


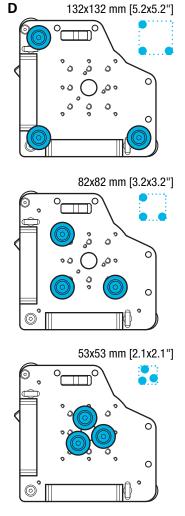

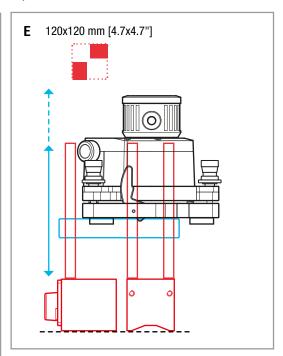

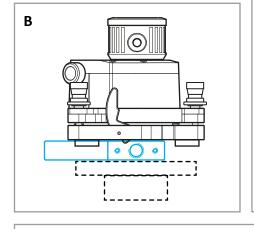

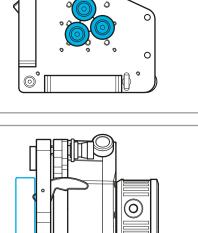

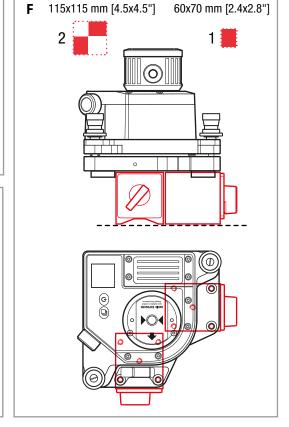





C


Multi bracket for XT lasertransmitter, Part No. 12-1275



mm [inch]

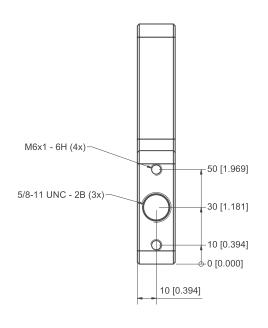


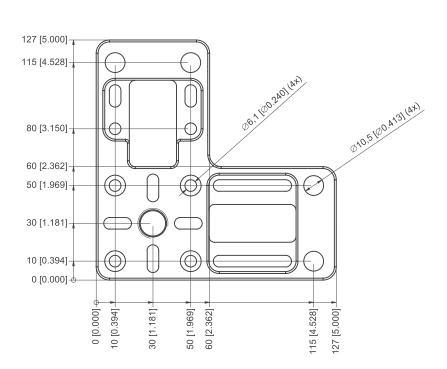


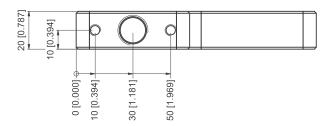

Magnet base, Part No. 12-0013



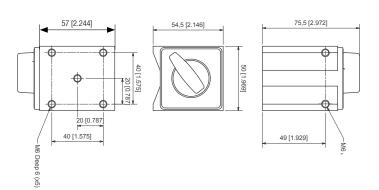


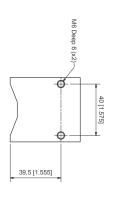



mm [inch]

Magnet base with turnable head, Part No. 12-1133




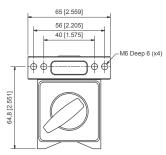


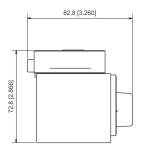


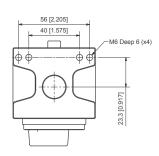

Small magnet base with turnable head, Part No. 12-0696

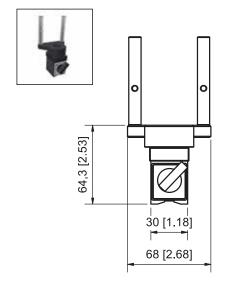





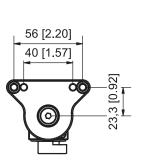

12-1125 DM Bracket



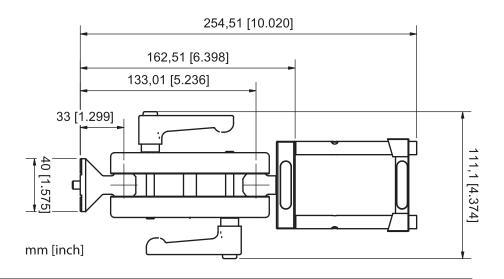


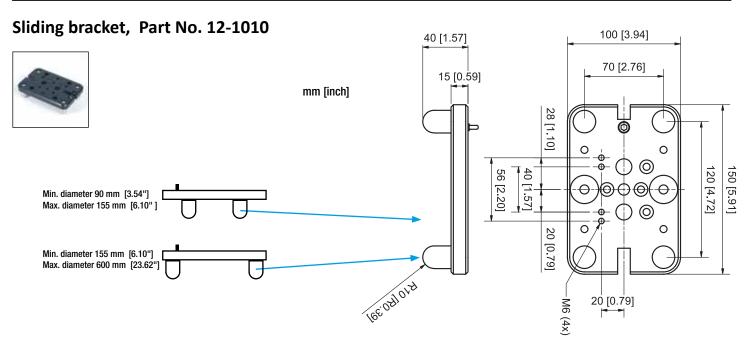

Offset bracket, Part No. 12-1008




Blue circles are threaded holes.

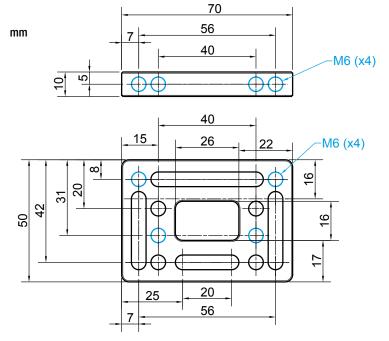




Mounting of 12-1375

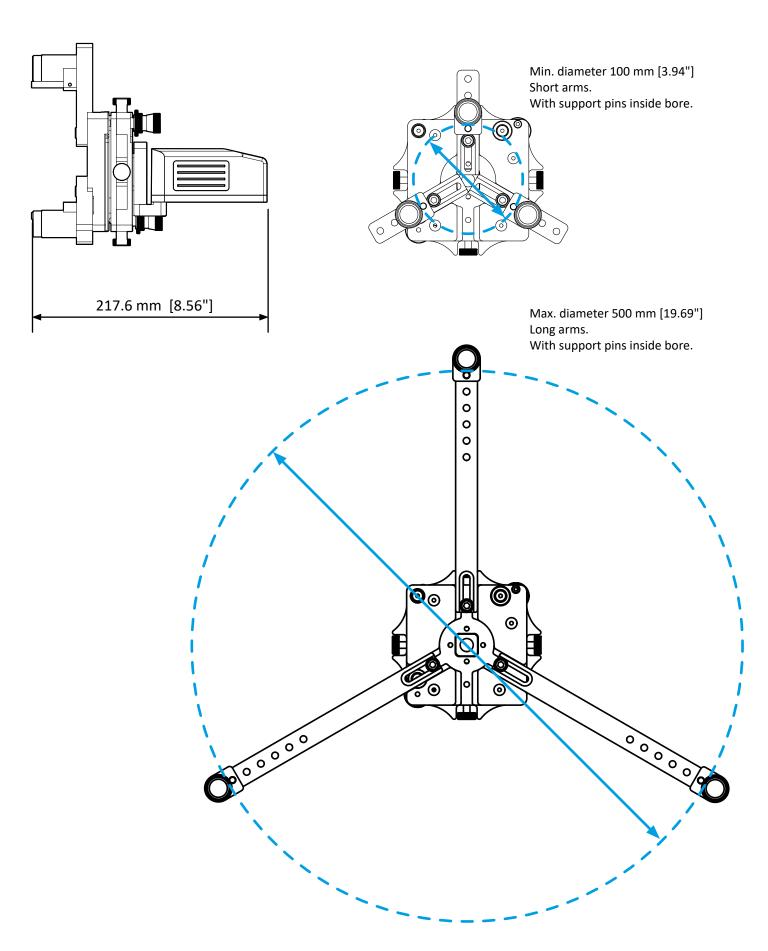

EASY-LASER®

12-1277 (for XT-series)

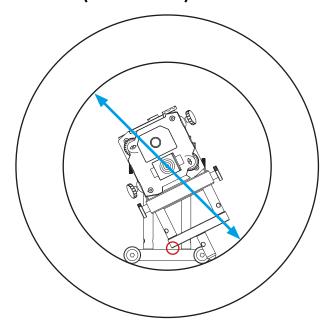


Min. diameter 220 mm [8.67"]

Note: This bracket can be assembled in many different ways, and used also with magnet base, magnetic bracket, etc. Then the minimum measurable diameters are other than specified here. Please consult your local distributor for more information.



=possible interference point for minimum diameters.

12-1282 (for E-series)

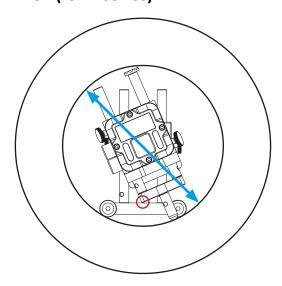


Min. diameter 170 mm [6.70"]


Note: This bracket can be assembled in many different ways, and used also with magnet base, magnetic bracket, etc. Then the minimum measurable diameters are other than specified here. Please consult your local distributor for more information.



12-0455 Slide bracket Small 12-0543 Slide bracket Medium 12-0510 Slide bracket Large

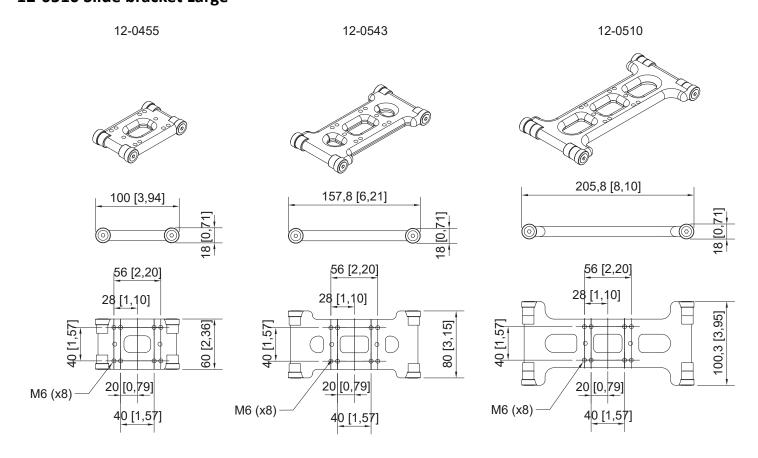


When used with XT70-M:

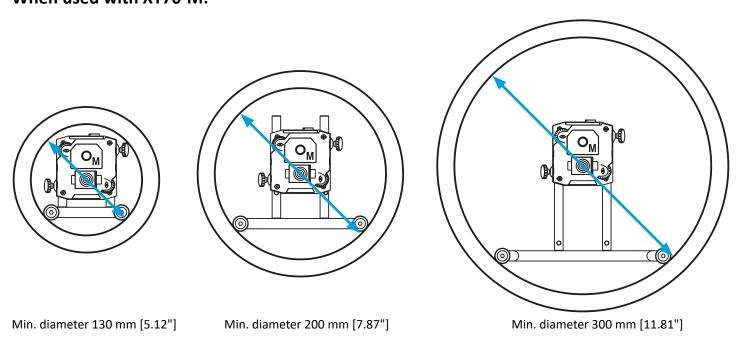




12-1368 Axial support on Slide brackets (12-0455 pictured)

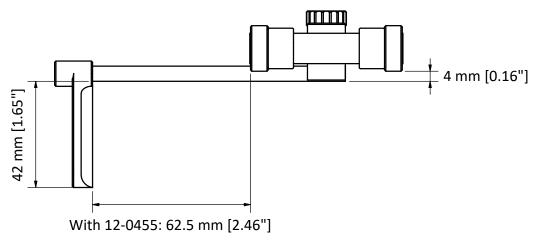

With 12-0543: 52.5 mm [2.07"]


With 12-0510: 42.5 mm [1.67"]

12-1373 Flange clamping bracket

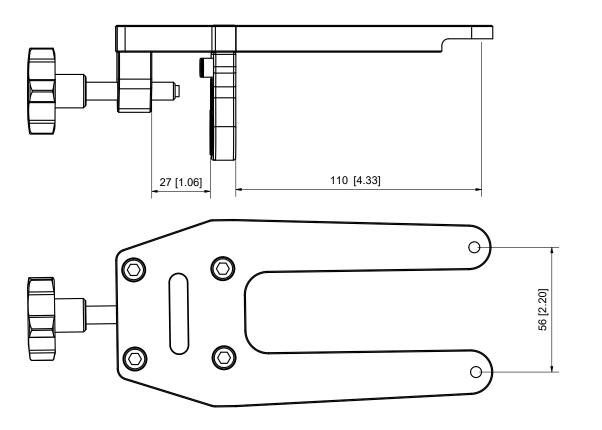





Angular prism, Part No. 12-1352

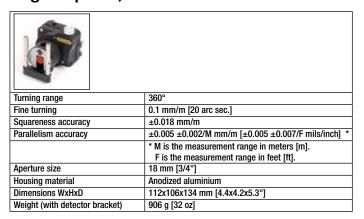


mm [inch]

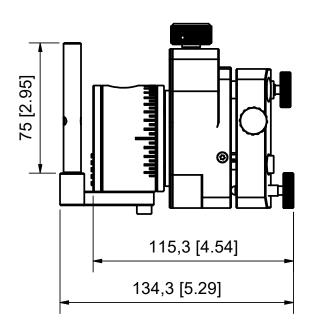

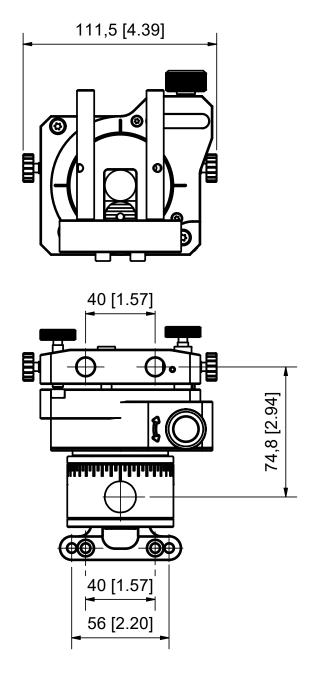




Detector XT9, Part No. 12-1350

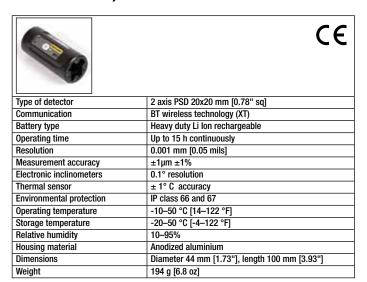


Note: when using the XT9 detector in long tubes with small diameters (<80 mm, 3.15"] wireless communication can be affected. Always consult your distributor before purchase. For normal bore alignment applications there is no problem.

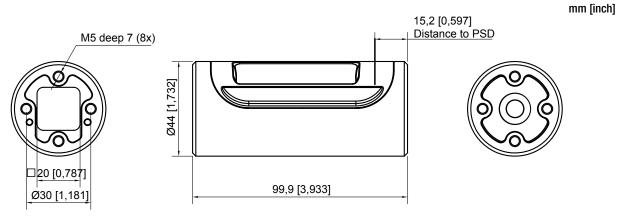

Measuring unit XT40-M, XT40-S, Part No. 12-0943 / 12-0944

mm [inch]



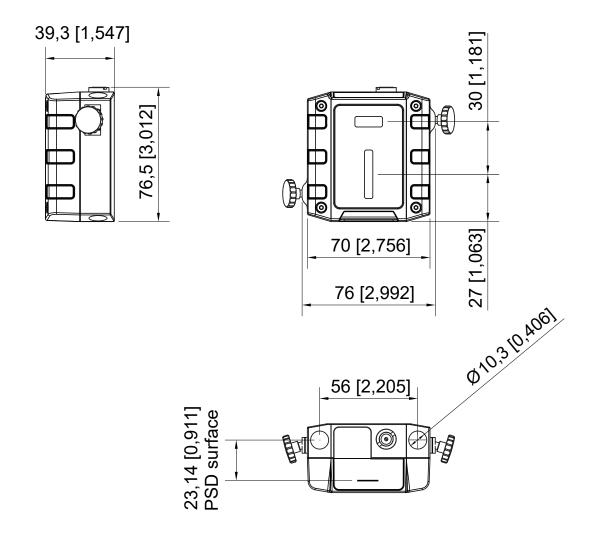




mm [inch]

Measuring unit XT60-M, XT60-S, Part No. 12-1028 / 12-1029



Measuring unit PSD 20x20 mm. XT60-M: Part No. 12-1028, XT60-S: Part No. 12-1029 1-axis TruePSD 20x20 mm [0.79x0.79"] Type of detector Communication BT wireless technology Battery type Heavy duty Li Ion chargeable Up to 24 h continuously Operating time Resolution 0.001 mm [0.05 mils] Measurement accuracy ±1µm ±1% Measurement range Up to 20 m [66 feet] Diode laser Type of laser Laser wavelength 630-680 nm Laser class Safety class 2 AVERAGE POWER < 0.6 mW. PULSE ENERGY < 20 nJ. Laser output PULSE DURATION 10-17 µs. WAVELENGTH 630-680 nm. Electronic inclinometer 0.1° resolution **Environmental protection** IP class 66 and 67 -10-50 °C [14-122 °F] Operating temperature -20-50 °C [-4-122 °F] Storage temperature 10-95% Relative humidity **OLED** display 128x64 pixels Housing material Anodized aluminium + PC/ABS + TPE


272 g [9.6 oz]

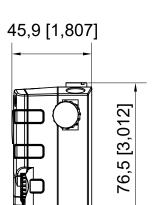

Measuring unit XT70-M, XT70-S, Part No. 12-1045 / 12-1046

WxHxD: 76x76.5x45.9 mm [3.0x3.0x1.8"]



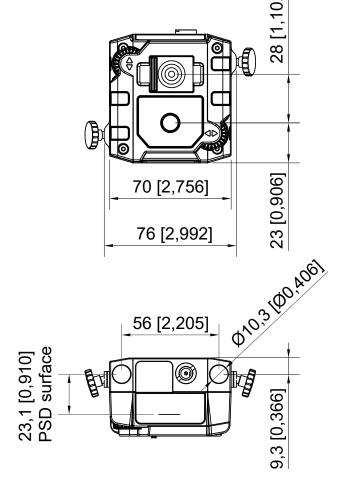



Dimensions

Weight


Measuring unit XT50-M, XT50-S, Part No. 12-1026 / 12-1027





LASER 2	**
04	170 C E
T50-S: Part N	lo. 12-1027
1 70vn 70"1	

Type of detector Communication	TruePSD 1 axis 20x20 mm [0.79x0.79"]		
Communication	DT - ded - testandon		
Outilituilication	BT wireless technology		
Battery type	Heavy duty Li lon chargeable		
Operating time	Up to 20 h continuously		
Resolution	0.001 mm [0.05 mils]		
Measurement accuracy	±1µm ±1%		
Measurement range	Up to 20 m [66 feet]		
Type of laser	Diode laser		
Laser wavelength	630–680 nm		
	Safety class 2		
Laser output	AVERAGE POWER < 0.6 mW. PULSE ENERGY < 20 nJ.		
	PULSE DURATION 10-17 µs. WAVELENGTH 630-680 nm.		
Electronic inclinometer	0.1° resolution		
Environmental protection	IP class 66 and 67		
Operating temperature	-10–50 °C [14–122 °F]		
Storage temperature	-20–50 °C [-4–122 °F]		
Relative humidity	10-95%		
OLED display	128x64 pixels		
Housing material	Anodized aluminium + PC/ABS + TPE		
Dimensions	WxHxD: 76x76.5x50.9 mm [3.0x3.0x2.0"]		
Weight	316 g [11.1 oz]		

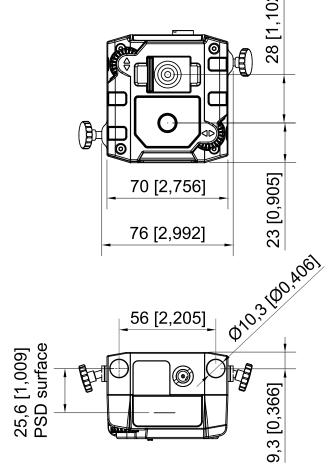





ZONE 1/21

mm [inch]

The EX rating is valid for the XT50 measuring units only,

Part No. 12-1026 and 12-1027. Brackets, fixturing equipment, case, and other accessories are not subject to any EX classification, and must be assessed by the user before use in EX environment. Easy-Laser does not take responsibility for the EX safety of accessories.

EX certificate number: Presafe 17 ATEX 10552X, IECEx PRE 17.0049X

II=Product group. Indicates that the instrument is approved for all areas except mines.

2G=Product category for gas atmosphere. Intrinsically safe equipment for zones 1 and 2 (likely occurrence of explosive gas atmosphere – gases, mists and vapours). **2D**=Product category for dust atmosphere. Intrinsically safe equipment for zones 21 and 22 (likely occurrence of explosive dust atmosphere).

ib op is =Type of EX protection (intrinsic safety and safe laser radiation levels).
 IIC=Explosion group for gas atmosphere. Example gases: Hydrogen & Acetylene.
 IIIC=Dust classification. Indicates that the instrument is approved for dust from flammable fibres, non conductive dust and conductive dust.

T4=Temperature class for gas atmosphere. The temperature class indicates the maximum temperature of the exposed surface of the product, corresponding to a maximum temperature of 135°C.


T135°C= Temperature class for dust atmosphere. Indicates that the maximum temperature of the exposed surface of the product is 135°C.

Gb=Equipment protection level for gas atmosphere. Corresponds to zone 1 and 2.

Db=Equipment protection level for dust atmosphere. Corresponds to zone 21 and 22.

Ta=Ambient temperature. Indicates that the product is safe for use in EX environments in the ambient temperature range as stated only.

Do not charge the units in potentially explosive environment!

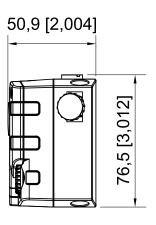




E- and XT-series wireless detector for BTA, Part No. 12-1054


CE Sheave diameters >60 mm [2.5"] 40 mm to 3 m [1.6" to 10'] (laser LOW power mode) Measurement distance 0.5 m to 10 m [20" to 33'] (laser HIGH power mode) Measurement range Axial offset: ±3 mm [0.12"]. Angular value: ±8° Displayed resolution Offset: 0.1°, Angle: 0.01° Display type Yellow OLED 96x96 pixels Connection BT wireless technology Battery type Li lon rechargeable **Battery operation** Up to 5 hours continuously Material ABS plastics / Anodized aluminium 37,1 [1,461] WxHxD: 95x95x36 mm [3.7x3.7x1.4"] Dimensions Weight 190 g [6.7 oz] 17,6 [0,693] 0 93,66 [3,688


93,49 [3,681]

mm [inch]

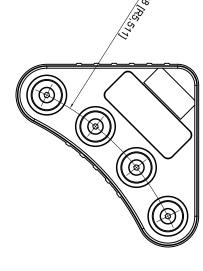


Laser transmitter BTA, Part No. 12-1325

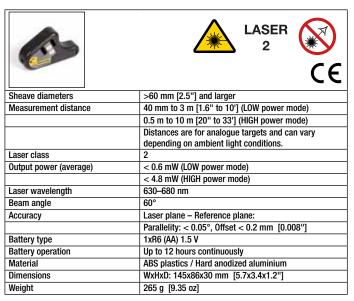

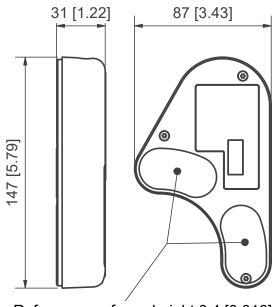

Reference surfaces height 0.4 [0.016]





Note: New products in rev24 marked with **Bold** letters. Discontinued products marked with *inclined* letters.

Part No.	Description	Page	03-1203	DC cable extension 1.5 m	XX
01-0039	Locking screw	•	03-1243	Charger for E-series Display unit	
01-0042	Nut (for chain)		03-1256	Charger for XT-series	
01-0045	Barrel nut		03-1291	Gauge block	
01-0048	Rod tightening tool, 4 mm	53	03-1323	Printer for D-series	
01-0076	Offset bracket, D-series		03-1326	Stinger for XT280	52
01-0139	Machine/Magnet base pin for D22, short		03-1327	Accelerometer magnet for XT280	
01-0618	Top for D23	53	03-1332	Demo unit, steel	52
01-0777	Tube adapters for E9 and D157	XX	03-1338	Tripod head	55
01-0847	Shim remover	XX	03-1406	Safety strap	51
01-0938	Rod, 30 mm	40	03-1429	Screw driver Torx T8	XX
01-1095	Key holder		03-1459	Charger for E-series printer	55
01-1165	Offset bracket for E-series		03-1707	Measuring tape 5 m [16.4']	51
01-1333	Machine/Magnet base pin for D22, long	44	04-0053	Sticker "This machine is aligned with Easy-Laser®"	54
01-1352	Sunvisor for D6		04-0124	Easy-Laser® logo sticker, large	
01-1379	Protective case for display unit E418	51	04-0125	Easy-Laser® logo sticker, small	56
01-1402	Screw for safety strap	51	04-0146	Laser target sticker	
01-1703	Velcro clip with pin	55	04-0147	Bar code sticker	
01-1768	Angle bracket		04-0252	Easy-Laser® logo stickers on sheet	
01-1866	Locking screw for XT units		04-0307	Set of QR code stickers	
01-1945	LCD display protection film		05-0792	Notebook for the technician	
01-1952	Replaced by 12-1039		06-0001	CD	
01-1953	Locking screw		12-0001	Measuring unit M, D-series, PSD 10x10mm	
01-2222	Tube adapters for dual barrels		12-0002	Measuring unit S, D-series, PSD 10x10mm	
01-2232	Tripod adaptor for Angular prism		12-0005	Detector D5	
03-0032	Printer 220 V		12-0012	Measuring tape, 2m [6.5']	
03-0041	Thermo paper roll		12-0013	Magnet base	
03-0042	Protective case for older display units		12-0016	V-bracket with chain	
03-0061	Screw M6x14		12-0022	Laser transmitter D22	
03-0241	Printer cable		12-0032	Detector Linebore	
03-0341	Printer 110 V		12-0033	Standard chain	
03-0333	PC cable		12-0034	System D650 Linebore	
03-0505 03-0591	Screw for D23 top cover		12-0039 12-0045	Sliding bracket	
03-0591			12-0045 12-0046	Magnet base with turnable head	
03-0592	Protective case for display unit D279		12-0046 12-0059	Angular prism D46 Rods, 60 mm [2.36"]	
03-0033	Connecting strip (with set screws)		12-0059	Rods, 240 mm [9.44"]	
03-0722	Case for BTA Ex		12-0000	Red cable 2.0 m [78.7"]	
03-0769	Aluminium beam, 500 mm [19.68"]		12-0075	Laser transmitter D75	
03-0770	Aluminium beam, 600 mm [23.62"]		12-0108	Red cable, extension, 5.0m [16.4"]	
03-0771	Aluminium beam, 1100 mm [43.31"]		12-0110	Tilt table	
03-0792	Plastic case for small items		12-0116	Measuring unit M, D-series, PSD 18x18mm, 2 axis	
03-0799	Protective case for display unit D336		12-0119	Measuring unit M, D-series, PSD 18x18mm	
03-0810	Replaced by 01-1953		12-0120	Measuring unit S, D-series, PSD 18x18mm	
03-0821	Replaced by 03-1243		12-0125	Cardan bracket set D-series	
03-0822	USB A – USB B cable		12-0128	Extension chain, set	
03-0824	Measuring tape, 3 m [9.8']		12-0130	V-bracket	
03-0842	Measuring tape, 5 m [16.4']		12-0132	Offset hub for D75	
03-0878	Cleaning cloth for optics		12-0133	System D600 Machine	XX
03-0892	Charger cable, EUR		12-0134	Foot set for linebore arms	
03-0893	Charger cable, USA		12-0137	Sliding bracket with turnable head	XX
03-0894	Charger cable, UK		12-0138	Sliding bracket with magnets and probe	
03-0895	Charger cable, AUS		12-0139	Target Cardan	48
03-0901	HDMI to HDMI cable		12-0143	Foot set for linebore for 100–150mm	41
03-0902	VGA to VGA cable	XX	12-0146	Laser transmitter D146	XX
03-0909	Transportation case	51	12-0149	Rod bracket for laser D75	XX
03-0914	USB memory stick	56	12-0154	Magnets for offset hub arms	42
03-0967	Hexagon wrench set		12-0157	Detector D157	XX
03-0972	LCD display protection film	53	12-0168	Laser transmitter D23	XX
03-1004	Printer for E-series		12-0169	Rotating detector bracket for rods	XX
03-1007	Carrying case for system E540 and E530	XX	12-0179	Red cable 1.0m [39.3"]	
03-1043	USB cable for streaming values	XX	12-0180	Red cable, extension, 10.0 m [32.8']	49
03-1044	Back pack system, medium		12-0185	System D660 Turbine	XX
03-1045	Back pack system, large	XX	12-0187	Axial bracket for laser transmitter	
03-1046	Luggage trolley		12-0188	Side support for D5	
03-1059	Carrying case for system E420	XX	12-0189	Side support for D75	
03-1184	Vapor capsule		12-0193	System D630 Extruder	
03-1193	White Vaseline	XX	12-0199	Large target extruder	XX

12-0201	Detector D6	. XX	12-0440	System E710 Shaft	. XX
12-0202	Sliding table for tripod		12-0442	Carrying case for system E710	
12-0203	Parallelity kit		12-0443	Centering target for turbine	
12-0205	AC adaptor for D22 and D75		12-0455	Slide bracket 120mm	
12-0207	System D505 Shaft		12-0456	Transportation case Ex large	
12-0213	Target for BTA, 15 mm		12-0476	Cam shaft bracket	
12-0220	System D800 Spin		12-0490	Short ball top probe	
12-0224	System D670 Parallelism		12-0494	Red cable 0.16m [6.3"]	. XX
12-0230	Magnet base with linear digital scale	. XX	12-0495	Shoulder strap for display unit E418	.51
12-0231	System D525 Shaft		12-0503	Bracket (Set square) for transmitter	
12-0235	System D525 B Shaft/Geometry	. XX	12-0508	Radial support for magnet base	
12-0236	Demo unit Sheave	. 52	12-0509	Detector E5	
12-0237	Transportation case cardan	.51	12-0510	Slide bracket 300mm	.41
12-0246	Laser transmitter D246	. XX	12-0525	System E910 Flange	. XX
12-0248	Detector bracket Long stroke for turbine	. XX	12-0526	System E915 Flange Spin	. XX
12-0255	Detector 30mm	. XX	12-0537	Offset hub with counterlock and tilt function	
12-0256	Measuring unit M, D-series, PSD 30x30 mm	. XX	12-0538	Detector Extruder 20mm	. XX
12-0258	Shims case, 180 shims	.54	12-0543	Slide bracket 200mm	.41
12-0259	Shims case, 360 shims	. 54	12-0544	Target 100x100m	. 47
12-0260	Measuring unit S, D-series, PSD 30x30 mm	. XX	12-0552	System D640 Machine tool	. XX
12-0269	Tripod	. 46	12-0553	Bore bracket adapter plate	. XX
12-0279	Display unit D279	. XX	12-0568	Mounting pin for D146	. XX
12-0282	Extension arms linebore	. 42	12-0573	VGA kit	. XX
12-0283	Vibrometer probe D283	. XX	12-0579	Magnet base with adapter Ex	. XX
12-0289	Red cable 0.4m [15.7"]	. XX	12-0580	Axial extension arms, linebore	.43
12-0294	AC adaptor for D23	. XX	12-0583	Pointing bracket on magnet base	. XX
12-0300	System D450 Shaft	. XX	12-0585	Charger 12–36 V for car	. XX
12-0303	Sliding bracket with magnets	. 39	12-0587	Sun visor for E-series	. XX
12-0308	Detector/display unit for belt alignment	. XX	12-0588	Target E-series	. XX
12-0309	Laser transmitter for sheave alignment systems	. XX	12-0590	AC adaptor for display unit D279	
12-0310	System D150 BTA	. XX	12-0592	Sun visor for Ex units	. XX
12-0314	Detector arms Linebore	. 41	12-0594	Laser transmitter D25	. XX
12-0319	Extension chain	. XX	12-0597	Splitter box	
12-0320	Rod adapter for D157	. XX	12-0603	Handheld detector bracket	
12-0321	Cable support		12-0608	Magnet base with turnable head, for D157	
12-0324	Rods, 120 mm [4.72"] 8 pcs		12-0615	Cardan bracket for E-series	
12-0329	Magnet base bracket for linebore detector		12-0617	Battery pack	
12-0334	Measuring unit M, Ex		12-0618	Battery pack with built-in wireless unit	
12-0335	Measuring unit S, Ex		12-0619	Barcode reader	
12-0336	Display unit D336 Ex		12-0622	Tool kit for tilt table	
12-0337	Shaft bracket with chain, stainless steel		12-0625	Standard chains	
12-0340	System D550 Shaft Extreme™		12-0628	Bracket for non-magnetic flanges, with handheld det	
12-0341	Self centering bracket		12-0652	System D652 Linebore	
12-0343	Slide bracket 100mm		12-0656	Vibrometer probe E285	
12-0360	Tool kit for system D550		12-0657	Detector for belt alignment E-series	
12-0362	Cable tester		12-0659	E170 BTA	
12-0363	Extension chain, stainless steel		12-0661	Offset hub with counterlock, for D75	
12-0364	Offset hub with arms		12-0662	System D662 Turbine	
12-0384	Offset hub arms		12-0663	System D663 Turbine	
12-0385	Laser transmitter bracket turbine		12-0664	System D664 Turbine	
12-0386	Chain, stainless steel		12-0676	System E950-A	
12-0390	Laser transmitter for sheave alignment Ex		12-0677	System E950-B	
12-0394	Target for BTA, 18 mm		12-0695	System E530 Shaft	
12-0400	System D130 BTA Ex		12-0696	Small magnet base with turnable head	
12-0402	Target Ex cardan		12-0697	Measuring unit ELS 30	
12-0403	Detector for belt alignment D-series		12-0698	Measuring unit ELM 30	
12-0404	Display unit for sheave/pulley alignment		12-0700	Display unit E52	
12-0411	System D160 BTA		12-0702	Detector E4	
12-0412	Replaced by 12-1012		12-0706	Laser transmitter D25 with offset hub	
12-0413	Replaced by 12-1147		12-0707	Arm kit with magnets	
12-0415	System D90 BTA		12-0709	Measuring unit holder for Angular prism	
12-0416	Demo unit Shaft		12-0710	System E960-A	
12-0417	Height adjustment bracket for detector D6		12-0711	System E960-B	
12-0418	Display unit E51 (formerly E418)		12-0715	Detector bracket "Long stroke" Turbine	
12-0422	System D480 Shaft		12-0725	Splitter cable for charging	
12-0423	Measuring unit M, D-series, PSD 10x10mm, Incl		12-0727	System E980 Sawmill	
12-0424	Measuring unit S, D-series, PSD 10x10mm, Incl		12-0728	Splitter cable for charging two 12-0738	
12-0433	Measuring unit N. E-series, PSD 20x20mm		12-0735	Red cable with angled connector	
12-0434	Measuring unit M, E-series, PSD 20x20mm		12-0738	BT wireless unit with battery	
12-0436	BT wireless unit		12-0739	BT wireless units kit for E530	
12-0438	Detector bracket Short stroke for turbine		12-0740	Batterypack with wireless unit, Kit	
12-0439	Ball top probe	C4.	12-0742	Tilt table with magnet base	. XX

12-0743	Shim case 3		12-0990	Adjustable magnet for offset hub arms	42
12-0745	System E420 Shaft	XX	12-0992	Replaced by 12-1017	36
12-0746	Measuring unit ELM 20		12-0997	Shoulder strap for XT12	
12-0747	Measuring unit ELS 20		12-1008	Offset bracket for XT-series	
12-0748	Display unit E53		12-1010	Sliding bracket	
12-0750	Replaced by 12-0989		12-1011	Replaced by 12-1147	
12-0751 1 <i>2-0752</i>	DC to USB adapter, for charging		12-1012 12-1017	Thin chain bracket	
12-0752 12-0755	Detector E7Shim case 4		12-1017	Magnetic brackets and rods, kit	
12-0758	Detector E8, 1-axis PSD		12-1019	Titanium rods, set of 3	
12-0759	Detector E9, 2-axis PSD	XX	12-1020	Carrying case Large for system E540	
12-0761	System E940 Machine tool		12-1025	Carrying case Small for system E540	
12-0762	"Red cable", extension 0.5 m [1.6']		12-1026	Measuring unit XT50-M EX	
12-0767	Rod adapter with built-in target		12-1027	Measuring unit XT50-S EX	
12-0768	Slide bracket, width 25 mm [0.99"]		12-1028	Measuring unit XT60-M	33
12-0771	System E920 Geometric	XX	12-1029	Measuring unit XT60-S	33
12-0772	System E950-C		12-1031	System XT550 EX without Display unit	
12-0775	System E540-B		12-1038	Extension chain stainless steel, set / EX	
12-0776	Measuring unit ELM 40		12-1039	Pin for hub	
12-0777	Measuring unit ELS 40		12-1040	V-bracket with stainless steel chain and rods / EX	
12-0787 12-0788	Spindle bracket for measuring unit		<i>12-1043</i> 12-1045	System E540-A Measuring unit XT70-M	
12-0766 12-0789	System E930 Extruder Measuring unit ESH, HyperPSD™		12-1045	Measuring unit XT70-W	
12-0709 12-0790	Measuring unit EMH, HyperPSD™		12-1047	Measuring probe, cylindrical	
12-0791	E-series wireless detector for belt alignment		12-1048	Measuring probe, cylindrical, with magnet	
12-0794	Target E-series 20x20		12-1049	Carrying case L for system XT440/XT660/XT770	
12-0796	System E180 BTA		12-1051	System XT660 with Display unit, case M	
12-0797	System Vestas 4		12-1052	System XT660 with Display unit, case L	
12-0799	Detector E3		12-1053	System XT190 BTA	
12-0801	Measuring probe Ruby diameter 2.5mm		12-1054	Detector unit for system XT190 BTA	
12-0804	Transportation case for BTA systems		12-1058	System XT660 without Display unit, case M	
12-0805	Measuring probe Ruby diameter 5mm		12-1059	System XT660 without Display unit, case L	
12-0810	Large target extruder		12-1060	Extension chain, set for E- and XT-series	
12-0814 1 <i>2-0815</i>	Tube bracket		12-1064 12-1086	Laser transmitter D26 ECOM Tab Display unit	
12-0813 12-0823	Adapter bracket for rod distance 40 mm Laser transmitter E30 Long Range		12-1090	XT280 Vibrometer, complete set	
12-0023 12-0824	Detector E7H, HyperPSD TM		12-1090	Small magnet base	Z J
12-0825	System Vestas 3		12-1095	System XT770 with Display unit	
12-0828	Offset hub with counterlock and tilt function		12-1096	System XT770 without Display unit	
12-0840	VGA kit, for serial number 94177 and newer		12-1097	System XT550 Ex/ATEX with Display unit	
12-0845	Detector E2	XX	12-1113	GA1 system+brackets for coupling assembled	
12-0846	Digital Precision Level E290	XX	12-1114	Bracket Kit GA1 for wind turbines	
12-0849	Roll bracket		12-1118	System Easy-Laser® GA1	
12-0850	System E180 without laser transmitter 12-0309.		12-1123	Extension for set square 12-1087, 295 mm	
12-0853	System E970 Parallelism		12-1124	Extension for set square 12-1087, 430 mm	36
12-0854 12-0855	System E975 Roll Alignment		12-1125 <i>12-1027</i>	DM-bracket	
12-0856	Upgrade kit Long stroke Roll alignment kit		12-1027 12-1128	System XT770 Shaft + GEO, with XT20	
12-0857	Digital Precision Level, complete kit		12-1129	Extension for DM-bracket	
12-0858	Laser transmitter E30 Long Range, with tilt table.		12-1130	DM-bracket, complete set	
12-0864	Tilt table, turnable		12-1132	Carrying case large for XT770, with XT20/XT22	
12-0874	Adapter plate for tilt table to magnet base	43	12-1133	Magnet base with turnable head	
12-0885	Large roll kit	XX	12-1136	Angular prism	XX
12-0901	Extension kit for large diameters	40	12-1142	Vestas 6 wind shaft system	
12-0915	Safety strap		12-1143	Vestas 5 wind shaft system	
12-0937	Height adjustment bracket for detector		12-1147	Magnetic bracket	36
12-0943	Measuring unit XT40-M		12-1151	Cardan bracket set	
12-0944	Measuring unit XT40-S		12-1161	Rods, 75 mm [2.95"], 4 pcs	
12-0949 12-0954	Replaced by 12-1118System E950-D Bore alignment		12-1183 12-1188	Vestas Installation kit upgrade Target (small hole), for Angular prism alignment	
12-0954 12-0955	System E720 Shaft/Geo		12-1196	ECOM Tab-Ex 02 Display unit	
12-0955 12-0961	XT11 Display unit for Generation XT		12-1790	Sliding table for magnet base	
12-0963	Shaft bracket with chain and rods		12-1205	Sun visor for XT40	
12-0966	System XT440 without Display unit		12-1209	Rotating detector bracket for rods, E and XT	
12-0967	System XT440 with Display unit XT11		12-1210	Magnet bracket long, with turnable head	35
12-0968	IR Camera added to XT11	XX	12-1211	Magnet bracket short, with turnable head	
12-0972	Carrying case Small for system XT440		12-1221	Angular prism, kit	
12-0973	Carrying case Medium for system XT440/XT660.		12-1225	AC adaptor for D23	
12-0985	Camera removed from XT11		12-1239	Carrying case Small for system XT440	
12-0987	Rods, 120 mm [4.72"], 4 pcs		12-1244	System XT290 Digital precision level	
1 <i>2-0988</i> 12-0989	Bar bracket DC split cable for charging		12-1261 12-1262	Target (large hole), for Angular prism alignment Detector bracket for centering on wire position	
	DO OPIR OUDIO FOI UIRIGITIU	70	14 1402	POTOGOTO PICCONOL TO POPILOTHIC OH WILD DOGINGH	UL

12-1294	XT22 Kit in case		
12-1296	XT980 Sawmill system with Display unit		
12-1300	Mounting screws for XT transmitters		
12-1320	XT Laser transmitter upgrade Kit with XT20		
12-1321 12-1325	XT Laser transmitter upgrade Kit with XT22 BTA Laser transmitter with 2 power modes		
12-1323	ecom Tab-Ex 03 DZ1		
12-1332	System D92 BTA		
12-1334	System XT770 Shaft + GEO, with XT22	12	
12-1335	System XT980 without display unit		
12-1336 12-1346	Wireless unit (Version 2, ESP32-MINI-1)		
12-1350	Detector XT9		
12-1351	Rod adapter with built-in target, C-C 56 mm		
12-1352	Angular prism Mk2		
<i>12-1354</i> 12-1355	Bore bracket kit, with D75 Bore Upgrade kit, with XT9		
12-1355 12-1356	System XT950 Bore alignment, with D75		
12-1362	Removal of camera on XT12		
12-1363	Angular prism Mk2, kit for D22		
12-1366	Shaft bracket with chain and rods 75 mm		
12-1368 12-1371	Axial support for slide bracket XT24 Laser transmitter	41	
12-1373	Flange clamping bracket		
12-1375	Offset hub w. counterlock and tilt for XT24	42	
12-1376	Angular prism Mk2, kit for XT22		
12-1378 12-1379	Bracket accessory kit in box Target for XT22		
12-13/9 12-1381	Bore bracket kit, XT24		
12-1383	Carrying case for Bore bracket kit with XT24		
12-1385	System XT950 Bore alignment, with XT24		
12-1384	Carrying case Medium BORE, with wheels		
12-1389 12-1393	System XT660 Shaft SG1 System XT660 Shaft WMB		
12-1418	Carrying case Medium GEO, with wheels		
12-1419	Rotational unit for wind shaft bracket	39	
12-1422	Extruder extension rods		
13-0004	Cap		
13-0006 13-0007	PenPlaying cards		
13-0007	A5 Notes		
13-0013	Keychain with spirit level		
Note: N	ew products in rev24 marked with Bo	ld latters	
INOLE. IN	ew produces in rever marked with bu l	ia iciicis.	

Note: New products in rev24 marked with **Bold** letters Discontinued products marked with *inclined* letters.



Easy-Laser® is manufactured by Easy-Laser AB, Alfagatan 6, SE-431 49 Mölndal, Sweden
Tel +46 31 708 63 00, Fax +46 31 708 63 50, e-mail: info@easylaser.com, www.easylaser.com
© 2024 Easy-Laser AB. We reserve the right to make changes without prior notification.
Easy-Laser® and Easy-Laser PLUS are a registered trademarks of Easy-Laser AB. Android, Google Play, and the Google Play logo are trademarks of Google Inc. Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Other trademarks belong to their respective owners.













